



OPERATION MANUAL

DAIKIN ROOM AIR CONDITIONER

MODELS

- ☒ FTKE09YV2S
- ☒ FTKE12YV2S
- ☒ FTKE18YV2S



Web manual

Web manual

Easy to use, convenient,
available anywhere, anytime

Scan QR code and enter model name
or access via www.daikin.co.th

CONTENTS

READ BEFORE OPERATION

Safety Precautions	2
Names of Parts	5
Preparation Before Operation	8

OPERATION

COOL/DRY/FAN Operation	10
Adjusting the Airflow Rate	11
Adjusting the Airflow Direction	12
POWERFUL Operation	13
COMFORT AIRFLOW Operation	14
ECONO Operation	15
MOLD PROOF Operation	16
OUTDOOR UNIT QUIET Operation	18
TIMER Operation	19

CARE

Care and Cleaning	21
-------------------------	----

WHEN THE NEED ARISES

Troubleshooting	25
-----------------------	----

SPECIFICATIONS

Specifications	30
----------------------	----

Safety Precautions

The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.

	Read the precautions in this manual carefully before operating the unit.		This appliance is filled with R32.
	WARNING Failure to follow these instructions properly may result in personal injury or loss of life.		Never attempt.
	CAUTION Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.		Be sure to follow the instructions.
			Be sure to establish an earth connection.

After reading, keep this manual in a convenient place so that you can refer to it and access to the web manual whenever necessary. If the appliance is transferred to a new user, be sure also to hand over the manual.

WARNING

About R32 refrigerant

-  Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants gas may not contain an odour.
- The appliance must be installed, operated and stored in a room with floor area larger than – *m².
* Since the maximum refrigerant charge of the model is below 1.22kg, it does not have any limitation for the minimum floor area.
The appliance should be installed in a well-ventilated room.
- Maintain an installation height of 2.5m or more from the floor surface to the bottom of the appliance.

When installing, relocating, and repairing

-  Do not use a refrigerant other than the one indicated on the outdoor unit (R32) when installing, relocating, or repairing.
Using other refrigerants may cause trouble or damage to the unit, and personal injury.
- Do not attempt to install, repair, dismantle reinstall or modify the air conditioner yourself. Improper workmanship may result in water leakage, electric shocks or fire hazards. Please contact your local dealer or technicians who have been trained to install, relocate and dismantle.
-  Beware of fire in case of refrigerant gas leakage.
If the air conditioner is not operating correctly, i.e. not generating cool air, refrigerant leakage could be the cause. Consult your dealer for assistance. The refrigerant within the air conditioner is safe and normally does not leak. However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas. Do not longer use the air conditioner until a qualified service person confirms that the leakage has been repaired.
- Arrange the drain hose to ensure smooth drainage. Imperfect drainage may cause wetting of the building, furniture, etc.
- Contact your dealer for repair and maintenance.
Improper repair and maintenance may result in water leakage, electric shock, and fire.
Only use accessories made by manufacture that are specifically designed for use with the equipment and have them installed by a technicians who have been trained to install.
-  Be sure to install an earth leakage circuit breaker. Failure to install an earth leakage circuit breaker may result in electric shock or fire.
- Be sure to earth the appliance. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shock.

When using the air conditioner



- In order to avoid fire, explosion or injury, do not operate the appliance when harmful, among which flammable or corrosive gases, are detected near the appliance.
- Be aware that prolonged, direct exposure to cool air from the air conditioner, or to air that is too cool or too warm, can be harmful to your physical condition and health.
- Do not place objects, including rods, your fingers, etc., in the air inlet or outlet. Product damage or personal injury may result due to contact with the air conditioner's high-speed fan blades.
- Do not use flammable spray near the air conditioner, or otherwise fire may result.
- To avoid electric shock, do not operate with wet hands.
- Do not place flammable items, such as spray cans, within 1m of the air outlet. The spray cans may explode as a result of hot air from the appliances.

About the power cord



- Only connect the appliance to the specified power supply circuit. Power supplies other than the one specified may result in electric shock, overheating and fires.

When cleaning



- Do not attempt to install, repair, dismantle reinstall or modify the appliances yourself. Improper workmanship may result in water leakage, electric shocks or fire hazards. Please contact your local dealer or technicians who have been trained to install, relocate and dismantle.

Terminate operation if abnormality or malfunction are observed



- When the appliance is malfunctioning (giving off a burning odour, etc.), turn off power to the appliance and contact your local dealer. Continued operation under such circumstances may result in a failure, electric shock or fire hazards.

**CAUTION**

About the indoor unit



- Do not use the appliance for purposes other than those for which it is intended. Do not use the appliance for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned.
- Do not expose plants or animals directly to the airflow from the appliance as this may cause adverse effects.
- Do not place appliances that produce naked flames in places exposed to the airflow from the unit as this may impair combustion carried out by such appliances.
- Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units. Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.
- Do not sit or hang on the panel. The panel may fall, and injury or product malfunction may result.
- Do not sway the panel around. The panel may hit people or objects, and injury or property damage may result.
- Do not let children play with or around the panel. Injury or property damage may result.
- Do not pull the wires of the appliance. The wires may be broken, as this may result in electric shocks or property damage may result.
- Do not locate obstacles in the path of the front panel. The front panel may fall, and injury or property damage may result.
- Do not bend or damage the wires. The wires may be broken, and injury or property damage may result.
- Do not put objects on the front panel, or otherwise production malfunctioning may result.



- To avoid oxygen depletion, ensure that the room is adequately ventilated if equipment such as a burner is used together with the appliance.
- Do not place objects around the appliance. Doing so may have an adverse influence on the performance, product quality, and life of the appliance.

Safety Precautions

About the outdoor unit



- Do not block the air inlets nor outlets. Impaired airflow may result in insufficient performance or trouble.
- Do not sit on the outdoor unit, put things on the unit, or pull the unit. Doing so may cause accidents, such as falling or toppling down, thus resulting in injury, product malfunction, or product damage.
- After prolonged use, check the appliance stand and mounts for damage. If they are left in a damaged condition, the appliance may fall and cause injury.
- To avoid injury, do not touch the air inlet or aluminium fins of the indoor or outdoor units.



- Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit.
Leaves are a hotbed for small animals which can enter the unit. Once inside the appliance, such animals can cause malfunctions, smoke or fire if they come into contact with electrical parts.

About the remote controller



- Do not insert the batteries in the wrong polarity (+/-) orientation as this may result in short circuit, fire, or battery leakage.
- Locate the remote controller in places out of reach of children. The wrong operation of the remote controller and accidents in the case of child accidentally has swallowed batteries may result in injury.

When using the air conditioner



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Impairment of bodily functions and harm to health may result.



- Children should be supervised to ensure that they do not play with the appliance or remote controller.
Accidental operation by a child may result in impairment of bodily functions and harm health.
- Avoid impacts to the appliances, or otherwise product damage may result.
- Be careful not to let pets urinate on the appliance. Urination on the appliance may result in electric shock or fire.

When cleaning



- Do not wash the air conditioner with water, as this may result in electric shock or fire.
- Do not place water containers (vases, etc.) above the unit, as this may result in electric shock or fire hazards if they should topple over.
- Do not stand on an unstable surface when operating or maintaining the appliance, or otherwise you may topple over or injure yourself.



- Before cleaning, be sure to stop unit operation and turn off the circuit breaker. Otherwise, an electric shock and injury may result.

This is an appliance that is not accessible to the general public.

Precautions relating to area surrounding the indoor and outdoor units


- Be sure to follow the instructions below.

- The indoor unit is at least 1 m away from any television or radio set (unit may cause interference with the picture or sound).
- Refrain from using the units in areas prone to high levels of oily smoke, such as a kitchen. Water leakage may result.

Names of Parts

■ Indoor Unit

FTKE09/12/18

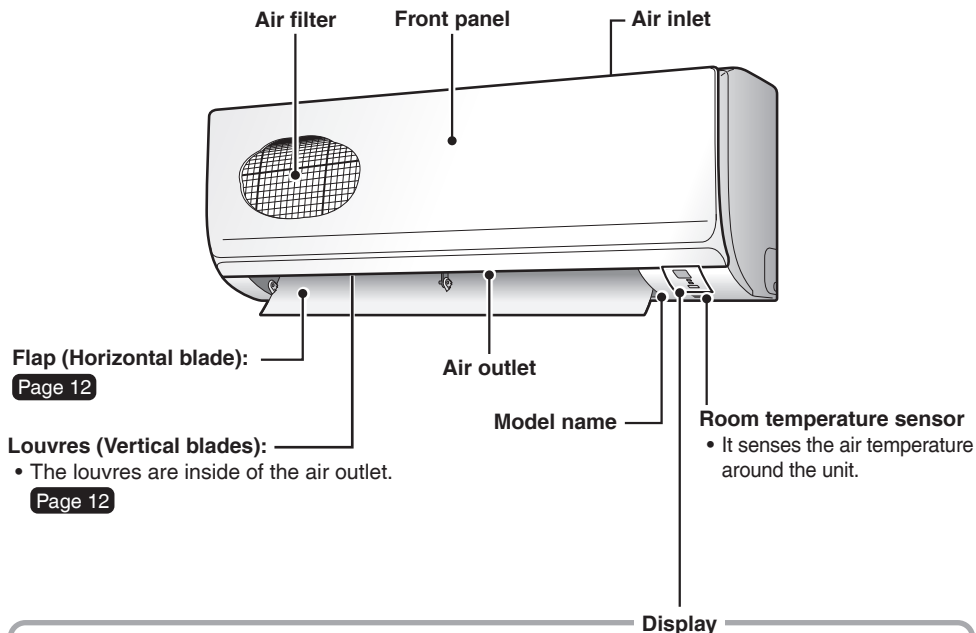

Flap (Horizontal blade):

Page 12

Louvres (Vertical blades):


- The louvres are inside of the air outlet.

Page 12

Display

Signal receiver:

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a beep sound.
 - Operation startbeep-beep
 - Settings changedbeep
 - Operation stopbeeeeeep

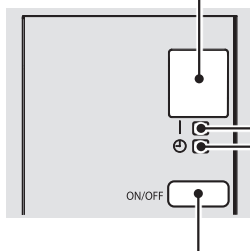

OPERATION lamp (green)

TIMER lamp (orange):

Page 19, 20

Indoor Unit ON/OFF switch:

- Push this switch once to start operation. Push once again to stop it.
- For the operation mode setting, refer to the following table.


Mode	Temperature setting	Airflow rate
COOL	22.0°C	AUTO

- This switch can be used when the remote controller is missing or out of batteries.


Names of Parts

■ Outdoor Unit


RKE09

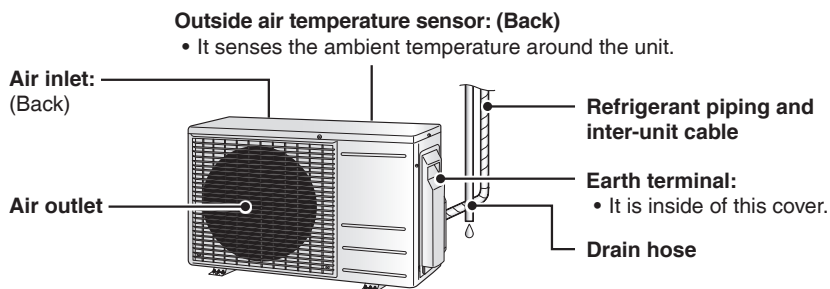

RKE12/18

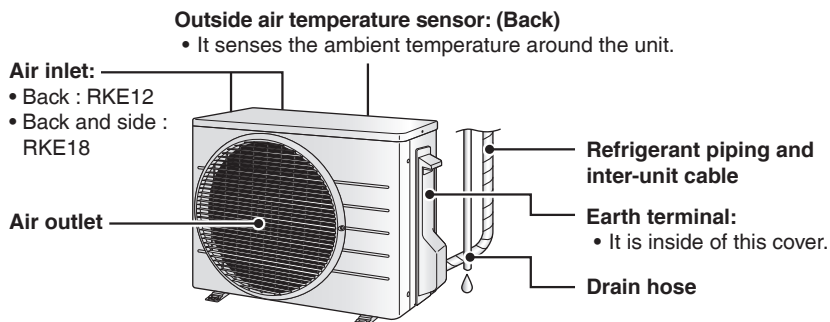


■ Remote Controller

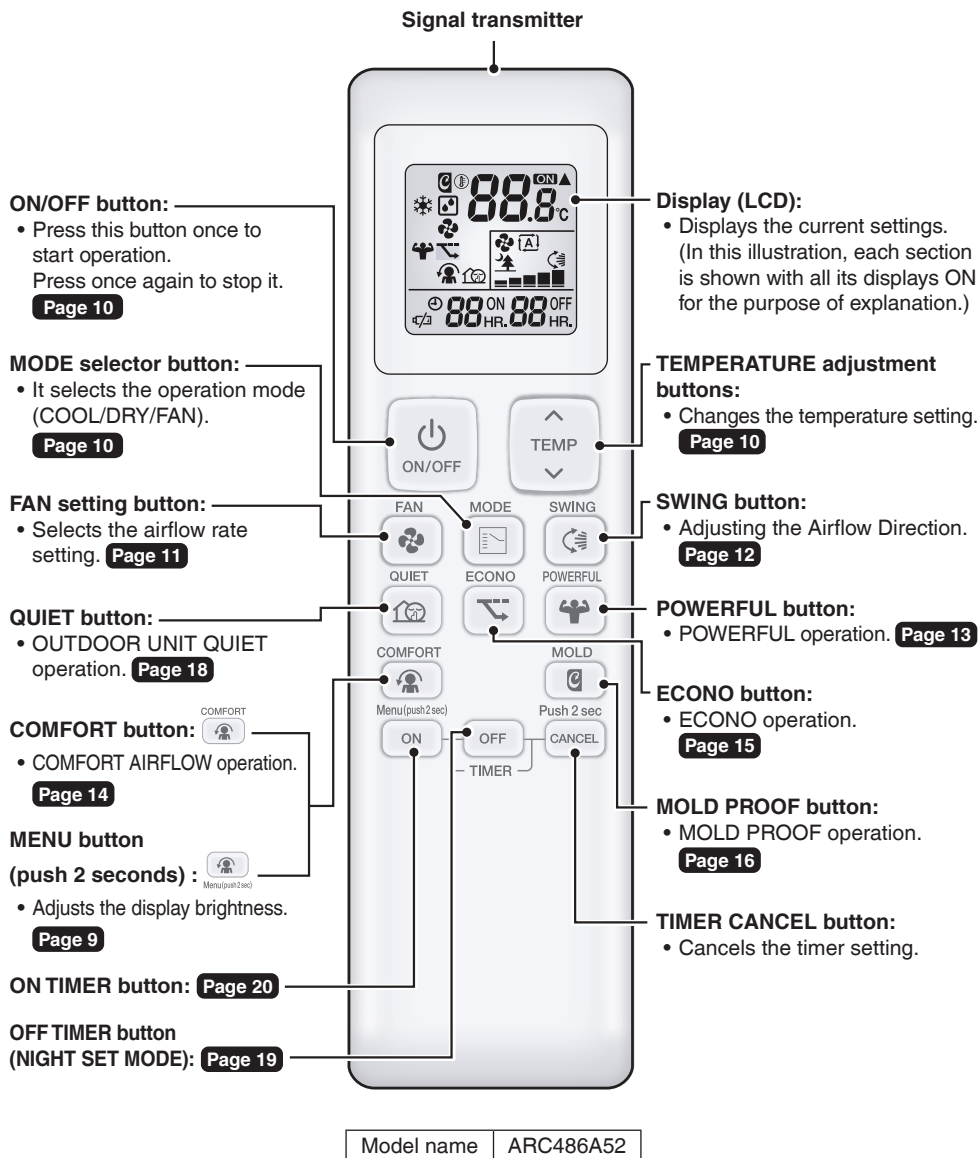


Preparation Before Operation

■ To set the batteries

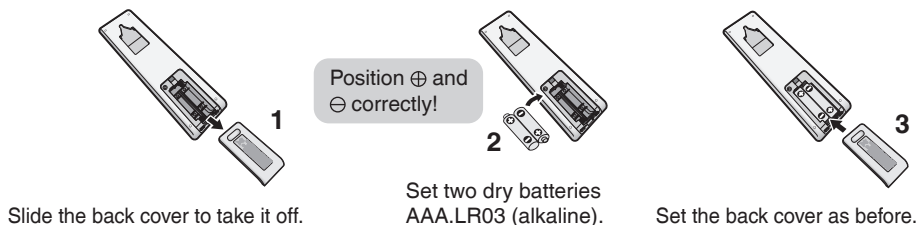


■ To operate the remote controller

- To use the remote controller, aim the transmitter at the indoor unit. If there is anything blocking signals between the unit and the remote controller, such as a curtain, the unit will not operate.
- Do not drop the remote controller. Do not get it wet.
- The maximum distance for communication is about 7 m.

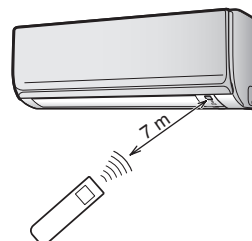

■ To fix the remote controller holder on the wall

1. Choose a place from where the signals reach the unit.
2. Fix the holder to a wall, a pillar, etc. with the screws supplied with the holder.
3. Place the remote controller in the remote controller holder.

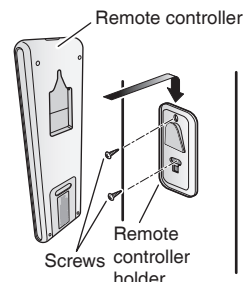

■ Turn the breaker on

- After the power is turned on, the flap of the indoor unit opens and closes once to set the reference position.


ATTENTION

■ About batteries

- The batteries will last for approximately one year. If the remote controller display begins to fade and the degradation of reception performance occurs within a year, however, replace both two batteries with new size AAA.LR03 (alkaline) batteries.
- When the system is not used for a long time, take the batteries out.
- The batteries supplied with the remote controller are for initial operation. The usable period of the batteries may be short depending on the manufactured date of the air conditioner.
- When battery power has run out, “ ” will begin blinking as an alert that the batteries need replacing. In some cases, when battery consumption is accelerated owing usage conditions, signal reception may decline before “ ” begins blinking.

■ About remote controller

- Never expose the remote controller to direct sunlight.
- Do not drop the remote controller or do not get it wet.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult the shop if that is the case.
- If the remote controller signals happen to operate another appliance, move that appliance to somewhere else, or consult the shop.

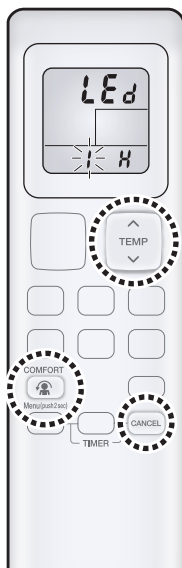

■ To set the brightness of the indoor unit lamps

Adjust the brightness of the indoor unit display as desired, or turn OFF the display.


■ To set

1. Press  and hold the button for 2 seconds.

- “LED” appears on the LCD.
- “ ” (menu number) blinks.

2. Press  to confirm the selected setting for menu number **1**.

3. Press  or  and select the desired brightness as follows:

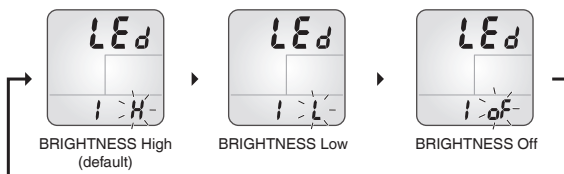

4. Press  again.
 - Brightness will be set to the chosen value.
5. Press  twice to return to the default screen.

NOTE

■ Note on setting brightness of the indoor unit lamps

- The display automatically returns to the default screen after 60 seconds.

COOL/DRY/FAN Operation




The air conditioner operates in the user selected operation mode.

■ To start


1. Press  and select an operation mode.

- Each pressing of the button changes the mode setting in sequence.

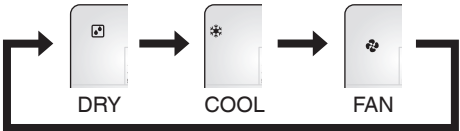

2. Press  .

- “**ON**” appears on the LCD.

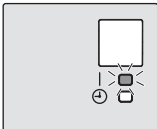

Display

- COOL/DRY/FAN operation.
The OPERATION lamp lights green.
- Operation mode can be changed while operating by pressing your desired operation mode button.

■ To cancel

Press  again.

- Then OPERATION lamp goes off.

■ To change the temperature setting

Press  .

- The displayed items on the LCD will change whenever either one of the buttons is pressed.

COOL operation	DRY or FAN operation
16.0-32.0°C	The temperature setting is not available.
Press ▲ to raise the temperature and press ▼ to lower the temperature. Each pressing of the button changes the temperature by 0.5°C.	

NOTE

MODE	Notes on each operation mode
COOL	• This air conditioner cools the room by releasing the heat in the room outside. Therefore the cooling performance of the air conditioner may be decrease if the outdoor temperature is high.
DRY	• The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.
FAN	• This mode is valid for fan only.


Adjusting the Airflow Rate

You can adjust the airflow rate to increase your comfort.

■ To adjust the airflow rate setting

Press .

- Each pressing of the button change the airflow rate setting in sequence shown below.

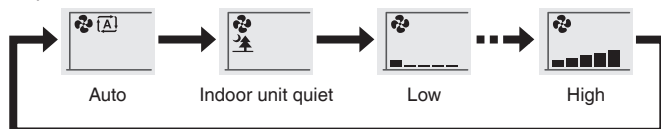

- When the airflow is set to “”, indoor unit quiet operation will start and the noise from the unit will become quieter.
- In indoor unit quiet operation, the airflow rate is set to a weak level.
- If the temperature does not reach the desired point, change the airflow rate setting.
- If COOL/DRY operation is started with airflow settings on “AUTO”, the indoor unit will initially deodorise, which functions to suppress any internal odours. As a result, the indoor unit will not emit air immediately. (Wait for about 1 minute.)
- At smaller airflow rates, the cooling effect is also smaller.

Tips for saving energy

- Be careful not to cool the room too much.
Keeping the temperature setting at a moderate level helps save energy.
- Recommended temperature setting for cooling is 26.0-28.0°C.
- Cover windows with a blind or a curtain.
Blocking sunlight and air from outdoors increases the cooling effect.
- Clogged air filters cause inefficient operation and waste energy.
Clean them once in about every 2 weeks.

Adjusting the Airflow Direction



You can adjust the airflow direction to increase your comfort.

ATTENTION

- Always use a remote controller to adjust the angles of the flap.
 - If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvres.
 - Inside the air outlet, a fan is rotating at a high speed.

[To operate automatically]

■ To adjust the flap (horizontal blade)


Up and down airflow direction

Press  .

- “” appears on the LCD.
- The flap (horizontal blade) will begin to swing.

When the flap has reached the desired position, press  once more.

- The flap will stop moving.
- “” disappears from the LCD.

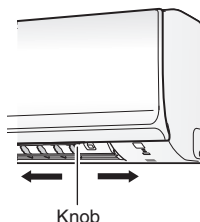

Knob

[To operate manually]

■ To adjust the louvres (vertical blades)

Right and left airflow direction

Hold the knob and move the louvres.

(You will find a knob on the left-side and the right-side blades.)

- When the unit is installed in the corner of a room, the direction of the louvres should be facing away from the wall.


If they face the wall, the wall will block off the wind, causing the cooling efficiency to drop.

NOTE

■ Note on airflow direction setting

- The movable range of the flap varies according to the operation mode, refer to the right picture.

[Movable range of the flap]

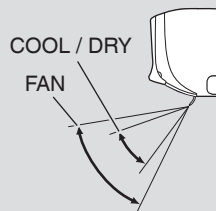

POWERFUL Operation



POWERFUL operation quickly maximizes the cooling effect in any operation mode. You can get the maximum capacity.

■ To start

➤ Press  during operation.

- POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
- “” appears on the LCD.

■ To cancel

➤ Press  again.

- “” disappears from the LCD.

NOTE

■ Notes on POWERFUL operation

- When  button is pressed within 10 seconds after press  button to start COOL or DRY operation, the air conditioner will work in quick cooling operation, the compressor and indoor fan will work at high speed to help cooling faster than normal POWERFUL operation under the condition that the indoor temperature level will be 25~37°C DB/outdoor temperature level will be 25~43°C DB.
- POWERFUL operation can only be set when the unit is running. Pressing  causes the settings to be canceled, and “” disappears from the LCD.
- POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.
 - In COOL operation
To maximise the cooling effect, the capacity of outdoor unit increases and the airflow rate becomes fixed at the maximum setting. The temperature and airflow settings can not be changed.
 - In DRY operation
The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.
 - In FAN operation
The airflow rate is fixed at the maximum setting.

Regarding the combination of POWERFUL and other operations

POWERFUL + COMFORT AIRFLOW	Not available*
POWERFUL + ECONO	
POWERFUL + OUTDOOR UNIT QUIET	

*Priority is given to the function of whichever button is pressed last.

COMFORT AIRFLOW Operation



The flow of air will be in the upward direction while in COOL/DRY operation, which will provide a comfortable wind that will not come in direct contact with people.

■ To start

Press  .

- “” appears on the LCD.

	COOL operation	DRY operation
Airflow rate	The airflow rate can be set to any level	AUTO

- Not available in FAN mode.

■ To cancel

Press  again.

- “” disappears from the LCD.


NOTE

■ Notes on COMFORT AIRFLOW operation


- The flap position will change, preventing air from blowing directly on the occupants of the room.
- POWERFUL operation cannot be used together with ECONO/COMFORT AIRFLOW/ OUTDOOR UNIT QUIET operation.
Priority is given to the function of whichever button is pressed last.
- In COMFORT AIRFLOW operation, horizontal blade will sway upward so that the wind blows toward the ceiling.

COMFORT AIRFLOW Operation (COOL/DRY mode)

- Direction of the flap: Upward (ceiling airflow)

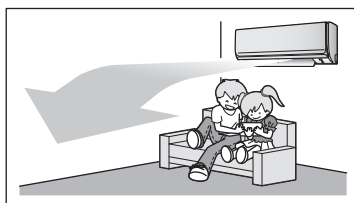

ECONO Operation

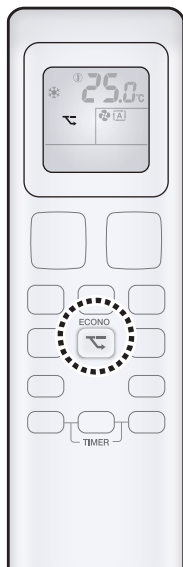

ECONO operation is a function which enables efficient operation by limiting the maximum power consumption value.

This function is useful for cases in which attention should be paid to ensure a circuit breaker will not trip when the product runs alongside other appliances.

■ To start

Press  .

- “” appears on the LCD.

■ To cancel

Press  again.


- “” disappears from the LCD.

NOTE

■ Notes on ECONO operation

- ECONO operation can only be set when the unit is running. Pressing  causes the setting to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in COOL and DRY operation.
- POWERFUL operation cannot be used together with ECONO/COMFORT AIRFLOW/OUTDOOR UNIT QUIET operation.
Priority is given to the function of whichever button is pressed last.
- If the power consumption level is already low, switching to ECONO operation will not reduce the power consumption.

MOLD PROOF Operation

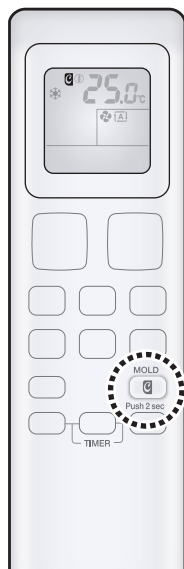

MOLD PROOF operation is a system that reduces the formation of mold that causes musty smells.

[To operate automatically]

■ To set

- Press  and hold the button for 2 seconds.

- “” appears on the LCD.
- After DRY or COOL operation stops, the air conditioner starts MOLD PROOF operation automatically.

■ To cancel

- Press  and hold the button for 2 seconds one more time.


- “” disappears from the LCD.

[To operate manually]

- Press  for about 2 seconds while the unit is not operating.

- “” blinks on the LCD, and the display returns to normal after a while.
- If the air conditioner is turned off for more than 3 minutes, press  once again and hold the button for 2 seconds to start MOLD PROOF operation.

[Flow of function]

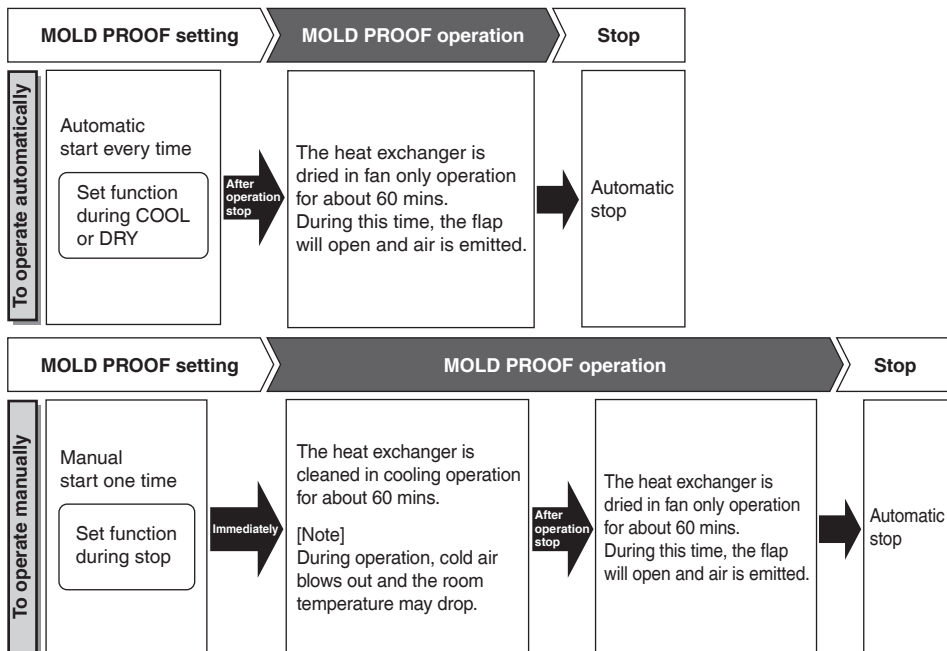

NOTE

■ Notes on MOLD PROOF setting

- The air conditioner is operating in MOLD PROOF mode. When you want to stop MOLD PROOF operation midway, press . The MOLD PROOF operation will be canceled, and “” disappears from the LCD.
- MOLD PROOF operation is not available when the unit is turned off using the OFF TIMER.

■ Notes on MOLD PROOF operation

- After COOL or DRY operation stops, the air conditioner starts MOLD PROOF operation automatically, and then stops automatically 1 hour later.
- MOLD PROOF operation may not be performed if the COOL and DRY operation less than 5 minutes (from turn on remote controller). In some case you should wait for about 3 minutes more (see **Troubleshooting** **Page 25** for details.).
- This function is not designed to remove existing dust or mold.

OUTDOOR UNIT QUIET Operation



OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

■ To start

Press .

- “” appears on the LCD.
- The air conditioner can operated in ECONO operation combined with OUTDOOR UNIT QUIET operation.

■ To cancel

Press  again.

- “” disappears from the LCD.

NOTE

■ Notes on OUTDOOR UNIT QUIET operation

- This function is available in COOL operation. (This is not available in FAN and DRY mode.)
- POWERFUL operation cannot be used together with ECONO/COMFORT AIRFLOW/OUTDOOR UNIT QUIET operation.
Priority is given to the function of whichever button is pressed last.
- OUTDOOR UNIT QUIET Operation will drop neither the frequency nor fan speed if the frequency and fan speed have been already dropped low enough.
- Even the operation is stopped by using the remote controller or the indoor unit ON/OFF switch using OUTDOOR UNIT QUIET operation, “” will remain on the remote controller display.
- This operation is performed with lower power and therefore may not provide a sufficient cooling effect.

TIMER Operation



Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning.

You can also use OFF TIMER and ON TIMER in combination.

[OFF TIMER operation]

■ To set


1. Press **OFF** .



- “⌚” “OFF HR.” appears on the LCD.

2. Press **OFF** until the time setting reaches the point you like.

- Each pressing of button increases the time setting by 1 hour.
- Setting time can be increased to 12 hours maximum.
- The TIMER lamp lights orange.

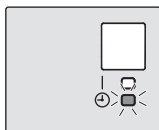

Display

■ To cancel

1. Press **CANCEL** .

- “⌚” “OFF HR.” disappears from the LCD.
- The TIMER lamp goes off.

NOTE

■ NIGHT SET MODE

- When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL) to prevent excessive cooling for your pleasant sleep.

TIMER Operation

[ON TIMER operation]

■ To set


1. Press **ON**.



- “ ON HR.” appears on the LCD.

2. Press **ON** until the time setting reaches the point you like.

- Each pressing of button increases the time setting by 1 hour.
- Setting time can be increased to 12 hours maximum.
- The TIMER lamp lights orange.

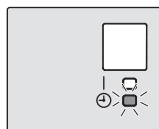

Display

■ To cancel

1. Press **CANCEL**.

- “ ON HR.” disappears from the LCD.
- The TIMER lamp goes off.

[ON/OFF TIMER combination]

■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the 2 timers is shown below.
- When setting while unit is operating.

(Example)

Turn off unit in the next 1 hr.) Combined
Turn on unit in the next 8 hr. (7 hr. after turn off)



- When setting while unit is stopped.

(Example)

Turn on unit in the next 2 hr.) Combined
Turn off unit in the next 5 hr. (3 hr. after turn on)



ATTENTION

■ In the following cases, set the timer again.


- After a breaker has turned OFF.
- After a power failure.
- After replacing batteries in the remote controller.

Care and Cleaning

CAUTION

- Before cleaning, be sure to stop operation and turn the breaker OFF.
- When opening and closing the front panel, use a robust and stable stool and watch your step carefully.
- After cleaning, make sure that the front panel is securely fixed.


■ Units

Wipe them with a dry soft cloth.		
----------------------------------	---	---

■ Front panel

1. Open the front panel.

- Hold the front panel by the sides and open it.

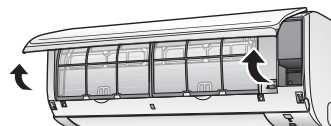

2. Clean the front panel.

If the front panel is dirty


- Wipe it with a soft damp cloth.
- Only neutral detergent may be used.

If the backside of the front panel is dirty, wipe it with a soft damp cloth.



3. Close the front panel

- Close the front panel slowly.
Press the panel at both sides and in the central area.
- Make sure that the front panel is securely fixed.

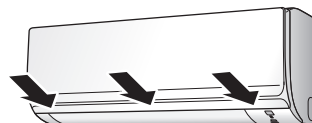

NOTE

■ Notes on cleaning the front panel.

- Do not wash in water.
- Do not tear a heat insulation material.
- Do not press or rub a heat insulation material.

Care and Cleaning




CAUTION

- Do not touch the aluminum fins by bare hand at the time of dismantling or mounting the filter.

■ Air filter


1. Pull out the air filters.

- Open the front panel. **Page 21**
- Push the filter tab at the centre of each air filter a little upwards, then pull it down.

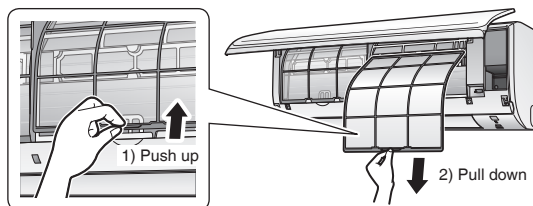

2. Wash the air filters with water or clean them with vacuum cleaner.

- It is recommended to clean the air filters every 2 weeks.

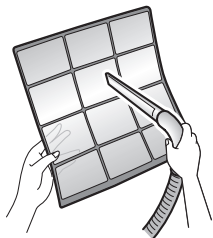

Use a vacuum cleaner to remove dust.



If the dust does not come off easily

Wash the air filters with neutral detergent thinned with lukewarm water, then dry them up in the shade.

3. Set the filters as they were and close the front panel.

- Press the front panel at both sides and the centre.

Sold separately


■ Filter (small)

* For the applicable filter type, please refer to **NOTE** on **Page 24**.

1. Open the front panel and pull out the air filters. **Page 21, 22**

2. Take off the filters. (small)

- Remove the filters from the tabs.

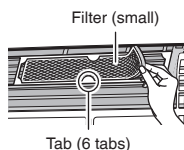

3. Clean or replace the filters.

[Cleaning]

Air quality filter (enzyme blue with PM2.5) [blue-white] or dust collection filter (PM2.5) [white]

- Do not wash the filters as this will reduce their efficiency.
It is recommended to replace it once **every 6 months**.

Deodorizing filter (enzyme blue) [blue] or titanium apatite deodorizing filter [blue-black]

3-1) Vacuum dust, and soak in lukewarm water or water for about 10 to 15 minutes if very dirty.

3-2) After washing, shake off remaining water and let them dry in the shade.

- This filter can be renewed by washing it with water once **every 6 months** and we recommend replacing it once **every 3 years**.
- Do not wring out the filter when removing water from it.

[Replacement]

Remove each filter from the front grille by detaching them from the tabs and then install the new filters.

- When attaching the filter, check that the filter is properly set in the tabs.

4. Set the filters as they were and close the front panel.

- Press the front panel at both sides and the centre.

Notes on cleaning

■ For cleaning, do not use the materials as follows.

- Hot water above 40°C.
- Benzene, gasoline, thinner, other volatile oils.
- Polishing compound.
- Scrubbing brushes, other hard stuff.



Care and Cleaning

NOTE

- Operation with dirty filters:
 - 1) cannot deodorize the air.
 - 2) cannot clean the air.
 - 3) results in poor cooling.
 - 4) may cause odour.
- Dispose of old filters as non-flammable waste.
- To purchase the filters (**Table 1**) or to purchase the another type, contact the dealer where you bought the air conditioner.
- The method of cleaning and replacement of the filters may differ depending on the model. Refer to the label attached to the separately sold filters themselves.

Table 1

Item	Part No.
Air quality filter (enzyme blue with PM2.5) - without frame (set of 2)	BAFP094A43
Deodorizing filter (enzyme blue) - without frame (set of 2)	BAFP094A41
Dust collection filter (PM2.5) - without frame (set of 2)	BAFP046A41
Titanium apatite deodorizing filter - without frame (set of 2)	KAF970A46

We recommend periodical maintenance.

In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a specialist aside from regular cleaning by the user. For specialist maintenance, contact the service shop where you bought the air conditioner.

The maintenance cost must be borne by the user.

Check

- Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
- Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
- Check that the drain comes smoothly out of the drain hose during COOL or DRY operation.
 - If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.

Before a long idle period

1. Operate the “MOLD PROOF”. **Page 16**
2. After operation stops, turn off the breaker for the room air conditioner.
3. Clean the air filters and set them again.
4. Take out the batteries from the remote controller.

Troubleshooting

These cases are not troubles.

The following cases are not air conditioner troubles but have some reasons. You may just continue using it.

Case	Description
Operation does not start soon. - When ON/OFF button was pressed soon after operation was stopped. - When the mode was reselected.	This is to protect the air conditioner. You should wait for about 3 minutes.
The outdoor unit emits water.	- In COOL or DRY mode - Moisture in the air condenses into water on the cool surface of outdoor unit piping and drips.
Mist comes out of the indoor unit.	This happens when the air in the room is cooled into mist by the cold airflow during cooling operation.
The indoor unit gives out odour.	This happens when smells of the room, furniture, or cigarettes are absorbed into the unit and discharged with the airflow. We recommend that you have the indoor unit cleaned. Please consult your dealer.
The outdoor fan rotates while the air conditioner is not in operation.	- After operation is stopped: - The outdoor fan continues rotating for about 60 seconds for system protection. - While the air conditioner is not in operation: - When the outdoor temperature is very high, the outdoor fan starts rotating for system protection.
The operation stopped suddenly. (OPERATION lamp is on.)	For system protection, the air conditioner may stop operating on a sudden large voltage fluctuation. It automatically resumes operation in about 3 minutes.
Remote controller does not work properly. - No remote controller signals are displayed. - The display is low in contrast or blacked out. - The remote controller sensitivity is low. - The LCD of the remote control is error displayed and out of control. "/A" on the LCD is blinking and the remote controller cannot be operated.	- The batteries are dying and the remote controller is malfunctioning. Replace all the batteries with new size AAA.LR03 (alkaline) batteries. For details, refer to "To set the batteries" of this manual. Page 8 - Battery power has run out. Replace both batteries at the same time with new size AAA.LR03 (alkaline) batteries. Leaving exhausted batteries in the remote controller can result in injury due to battery leakage, rupturing or heating, or lead to equipment failure. (Even when the "/A" is blinking, the OFF button remains functional.)

Troubleshooting

Case	Description
■ The unit does not receive signals from remote controller or has a limited operating range. ■ Other electronic devices start operating.	• Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult your dealer if that is in this case. • The remote controller may not function correctly if the transmitter is exposed to direct sunlight. • It is possible for any electronic devices that generate signals or infrared rays such as smartphones and game consoles placed near the unit. The signals coming from electronic devices can interfere with the remote control signal • If the remote controller activates other electronic devices, move them away or consult your dealer.
The flap does not start swinging immediately.	• The air conditioner is adjusting the flap position. • The flap will start moving soon.
A sound is heard. ■ A sound like a flow of water ■ Ticking sound ■ Clicking sound during operation or idle time ■ Clipping sound ■ Latching sound	• This sound is generated because the refrigerant in the air conditioner is flowing. • This is a pumping sound of the water in the air conditioner and heard when the water is pumped out from the air conditioner in cooling or drying operation. • This sound is generated when the size of the air conditioner slightly expands or shrinks as a result of temperature changes. • This sound is generated when the refrigerant control valves or the electrical parts operate. • This sound is heard from the inside of the air conditioner when the exhaust fan is activated while the room doors are closed. Open the window or turn off the exhaust fan. • This sound is generated when the electronic expansion valve of the outdoor unit operation stops or turns the power off and on again.
Rotating machinery causes sound. ■ Sound is heard when the horizontal swing flap moves.	• When the air conditioner is operating in a quiet environment and the airflow rate of the indoor unit is set to Quiet Mode or Low Mode, the motion of the swing flap may cause sounds.
Air does not come out.	■ In COOL or DRY mode • If COOL/DRY operation is started with airflow settings on "AUTO", the indoor unit will initially deodorise, which functions to suppress any internal odours. As a result, the indoor unit will not emit air immediately. (Wait for about 1 minute.)
■ The air conditioner continues operating even after COOL or DRY operation is stopped.	• The air conditioner is operating in MOLD PROOF mode. When you want to stop MOLD PROOF operation midway, press  .

Check again.

Please check again before calling a repair person.

Case	What to check
The air conditioner does not operate. OPERATION lamp is off. OPERATION lamp blinks.	• Hasn't a breaker turned OFF or a fuse blown? • Isn't it a power failure? • Are batteries set in the remote controller? • Is the timer setting correct? • Turn off the power with the circuit breaker and restart operation with the remote controller. If the OPERATION lamp is still blinking, check the error code and consult your dealer.
Cooling effect is poor.	• Are the air filters clean? • Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? • Is the temperature setting appropriate? • Are the windows and doors closed? • Are the airflow rate and the air direction set appropriately? • Are outdoor ambient temperature not in operation range? • Is the unit set to the ECONO/MOLD PROOF/OUTDOOR UNIT QUIET mode? Page 15-18
Operation stops suddenly. (OPERATION lamp blinks.)	• Are the air filters clean? • Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? • Clean the air filters or take all obstacles away and turn the breaker OFF. Then turn it ON again and try operating the air conditioner with the remote controller. If the lamp still blinks, call the service shop where you bought the air conditioner.
An abnormal functioning happens during operation.	• The air conditioner may malfunction with lightning or radio waves. Turn the breaker OFF, turn it ON again and try operating the air conditioner with the remote controller.

■ Notes on the operating conditions

- The air conditioner always consumes a small amount of electricity even while it is not operating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker off.
- Use the air conditioner in the following conditions.

MODE	Operating conditions	If operation is continued out of this range
COOL / DRY	Outdoor temperature : 19.4-46°C Indoor temperature : 16-32°C Indoor humidity : 80% max.	• A safety device may work to stop the operation. • Condensation may occur on the indoor unit and drip.

- Operation outside this humidity or temperature range may cause a safety device to disable the system.

Troubleshooting

Call the service shop immediately.

WARNING

- When an abnormality (such as a burning smell) occurs, stop operation and turn the breaker OFF. Continued operation in an abnormal condition may result in troubles, electric shocks or fire.
- Please contact the service shop where you bought the air conditioner.
Do not attempt to repair or modify the air conditioner by yourself.
Incorrect work may result in electric shocks or fire.
Please consult the service shop where you bought the air conditioner.

If one of the following symptoms takes place, call the service shop immediately.

- **The power cord is abnormally hot or damaged.**
- **An abnormal sound is heard during operation.**
- **The safety breaker, a fuse, or the earth leakage breaker cuts off the operation frequently.**
- **A switch or a button often fails to work properly.**
- **There is a burning smell.**
- **Water leaks from the indoor unit.**



Turn the breaker
OFF and call the
service shop.


- **After a power failure**
The air conditioner automatically resumes operation in about 3 minutes. You should just wait for a while.

- **Lightning**
If lightning may strike the neighboring area, stop operation and turn the breaker OFF for system protection.

■ Disposal requirements

- Dismantling of the unit and handling of the refrigerant, oil and other parts should be done in accordance with the relevant local and national regulations. Please contact your local dealer or technicians who have been trained to install, relocate and dismantle.

■ Fault diagnosis by remote controller

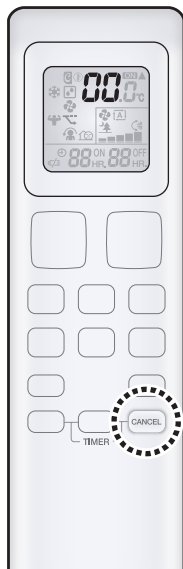

In case the air conditioner is malfunctioning, you can check the error code via the remote controller before consulting with service personnel and informing them of the malfunction code.

1. When **CANCEL** is held down for about 5 seconds,

“00” blinks in the temperature display section.

2. Press **CANCEL** repeatedly until a long beep is produced.

- The code indication changes as shown below, and notifies you with a long beep.

	CODE	MEANING
SYSTEM	00	NORMAL
	UA	INDOOR-OUTDOOR UNIT COMBINATION FAULT
	U0	REFRIGERANT SHORTAGE
	U2	DROP VOLTAGE OR MAIN CIRCUIT OVERVOLTAGE
	U4	FAILURE OF TRANSMISSION (BETWEEN INDOOR UNIT AND OUTDOOR UNIT)
INDOOR UNIT	A1	INDOOR PCB DEFECTIVENESS
	A5	HIGH PRESSURE CONTROL OR FREEZE-UP PROTECTOR
	A6	FAN MOTOR FAULT
	C4	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	C9	FAULTY SUCTION AIR TEMPERATURE SENSOR
OUTDOOR UNIT	EA	COOLING-HEATING SWITCHING ERROR
	E1	CIRCUIT BOARD FAULT
	E5	OL STARTED
	E6	FAULTY COMPRESSOR START UP
	E7	DC FAN MOTOR FAULT
	F3	HIGH TEMPERATURE DISCHARGE PIPE CONTROL
	F6	HIGH PRESSURE CONTROL (IN COOLING)
	F8	OPERATION HALT DUE TO COMPRESSOR INTERNAL TEMPERATURE ABNORMALITY
	H0	SENSOR FAULT
	H6	OPERATION HALT DUE TO FAULTY POSITION DETECTION SENSOR
	H8	DC CURRENT SENSOR FAULT
	H9	FAULTY SUCTION AIR TEMPERATURE SENSOR
	J3	FAULTY DISCHARGE PIPE TEMPERATURE SENSOR
	J6	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	L3	ELECTRICAL PARTS HEAT FAULT
	L4	HIGH TEMPERATURE AT INVERTER CIRCUIT HEATSINK
	L5	OUTPUT OVERCURRENT
	P4	FAULTY INVERTER CIRCUIT HEATSINK TEMPERATURE SENSOR

NOTE

- A short beep and 2 consecutive beeps indicate non-corresponding codes.
- To cancel the code display, hold **CANCEL** down for about 5 seconds. The code display also clears if no button is pressed for 1 minute.

Specifications

Indoor unit model name		FTKE09YV2S	FTKE12YV2S	FTKE18YV2S
Outdoor unit model name		RKE09YV2S	RKE12YV2S	RKE18YV2S
Cooling capacity	kW(kcal/h)	2.7 (2320)	3.6 (3100)	5.3 (4560)
Running current	A	4.1	5.4	8.2
Power consumption	W	860	1130	1740
Indoor unit	Dimensions	H (mm)	285	
		W (mm)	770	
		D (mm)	226	
	Net weight	kg	8	9
Outdoor unit	Dimensions	H (mm)	418	550
		W (mm)	695	675
		D (mm)	244	284
	Net weight	kg	21	32
Note Cooling capacity and electrical performance are based on the following conditions: Indoor temperature: 27°C DB, 19°C WB Outdoor temperature: 35°C DB, 24°C WB Fan speed: High Power supply: 220V, 50Hz				

MEMO

MEMO

SIAM DAIKIN SALES CO.,LTD.

22 Soi Onnuch 55/1 On-nuch Rd., Pravet
Subdistrict, Pravet District, Bangkok 10250
Thailand.

Tel : 0-2838-3200

Fax : 0-2721-7607-8

บริษัท สยามไดกันเซลล์ จำกัด

22 ซอยอ่อนนุช 55/1
ถนนอ่อนนุช แขวงประเวศ
เขตประเวศ, กรุงเทพฯ 10250

โทร : 0-2838-3200

โทรสาร : 0-2721-7607-8

