




OPERATION MANUAL

DAIKIN ROOM AIR CONDITIONER

MODELS

- ☒ FTKM09YV2S
- ☒ FTKM12YV2S
- ☒ FTKM15YV2S
- ☒ FTKM18YV2S
- ☒ FTKM24YV2S

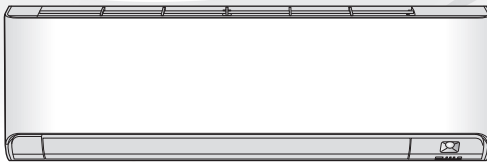

Web manual

Web manual

**Easy to use, convenient,
available anywhere, anytime**

Scan QR code and enter model name
or access via www.daikin.co.th

[Sticker attachment area]

Attach the SSID&KEY sticker of wireless LAN
connecting adapter to the sticker attachment area
and keep safe.

CONTENTS

READ BEFORE OPERATION

Safety Precautions	2
Names of Parts	5
About smart control	8
Preparation Before Operation	9

OPERATION

COOL/DRY/FAN ONLY Operation	10
Adjusting the Airflow Rate	11
Adjusting the Airflow Direction	12
POWERFUL Operation	13
COMFORT AIRFLOW Operation	14
INTELLIGENT EYE Operation	15
ECONO Operation	16
MOLD PROOF Operation	17
FLASH STREAMER AIR CLEANING Operation	19
OUTDOOR UNIT QUIET Operation	20
CHILD LOCK Operation	21
TIMER Operation	22

SYSTEM CONTROL VIA SMART CONTROL

Wireless LAN connection	24
-------------------------------	----

CARE

Care and Cleaning	28
-------------------------	----

TROUBLESHOOTING

Troubleshooting	32
-----------------------	----

SPECIFICATIONS

Specifications	37
----------------------	----

Safety Precautions

	Read the precautions in this manual carefully before operating the unit.		This appliance is filled with R32.
--	---	--	---

- After reading, keep this manual in a convenient place so that you can refer to it and access to the web manual whenever necessary. If the appliance is transferred to a new user, be sure also to hand over the manual.
- The precautions described herein are classified as **WARNING** and **CAUTION**. They both contain important information regarding safety. Be sure to observe all precautions without fail.

 WARNING	Failure to follow these instructions properly may result in personal injury or loss of life.		
 CAUTION	Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.		
 Never attempt.	 Be sure to follow the instructions.		Be sure to establish an earth connection.

WARNING

About R32 refrigerant

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants gas may not contain an odour.
- The appliance must be installed, operated and stored in a room with floor area larger than – *m².
* Since the maximum refrigerant charge of the model is below 1.22kg, it does not have any limitation for the minimum floor area.
The appliance should be installed in a well-ventilated room.
- Maintain an installation height of 2.5m or more from the floor surface to the bottom of the appliance.

When installing, relocating, and repairing

- Do not use a refrigerant other than the one indicated on the outdoor unit (R32) when installing, relocating, or repairing.
Using other refrigerants may cause trouble or damage to the unit, and personal injury.
- Do not attempt to install, repair, dismantle reinstall or modify the air conditioner yourself. Improper workmanship may result in water leakage, electric shocks or fire hazards. Please contact your local dealer or technicians who have been trained to install, relocate and dismantle.
- Beware of fire in case of refrigerant gas leakage.
If the air conditioner is not operating correctly, i.e. not generating cool air, refrigerant leakage could be the cause. Consult your dealer for assistance. The refrigerant within the air conditioner is safe and normally does not leak. However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas. Do not longer use the air conditioner until a qualified service person confirms that the leakage has been repaired.
- Arrange the drain hose to ensure smooth drainage. Imperfect drainage may cause wetting of the building, furniture, etc.
- Contact your dealer for repair and maintenance.
Improper repair and maintenance may result in water leakage, electric shock, and fire.
Only use accessories made by manufacture that are specifically designed for use with the equipment and have them installed by a technicians who have been trained to install.
- Be sure to install an earth leakage circuit breaker. Failure to install an earth leakage circuit breaker may result in electric shock or fire.
- Be sure to earth the appliance. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shock.

When using the air conditioner



- In order to avoid fire, explosion or injury, do not operate the appliance when harmful, among which flammable or corrosive gases, are detected near the appliance.
- Be aware that prolonged, direct exposure to cool air from the air conditioner, or to air that is too cool or too warm, can be harmful to your physical condition and health.
- Do not place objects, including rods, your fingers, etc., in the air inlet or outlet. Product damage or personal injury may result due to contact with the air conditioner's high-speed fan blades.
- Do not use flammable sprays (such as hairspray, insecticides, disinfectants, air dusters, etc.) or deodorants near the unit and avoid spraying them directly onto the unit. Do not wipe the unit with benzene or thinner. May cause fire, water leakage, refrigerant leakage, deformation of the main unit, malfunction, etc.
- To avoid electric shock, do not operate with wet hands.
- Do not place flammable items, such as spray cans, within 1m of the air outlet. The spray cans may explode as a result of hot air from the appliances.

About the power cord



- Only connect the appliance to the specified power supply circuit. Power supplies other than the one specified may result in electric shock, overheating and fires.

When cleaning



- Do not attempt to install, repair, dismantle reinstall or modify the appliances yourself. Improper workmanship may result in water leakage, electric shocks or fire hazards. Please contact your local dealer or technicians who have been trained to install, relocate and dismantle.

Terminate operation if abnormality or malfunction are observed



- When the appliance is malfunctioning (giving off a burning odour, etc.), turn off power to the appliance and contact your local dealer. Continued operation under such circumstances may result in a failure, electric shock or fire hazards.

**CAUTION**

About the indoor unit



- Do not use the appliance for purposes other than those for which it is intended. Do not use the appliance for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned.
- Do not expose plants or animals directly to the airflow from the appliance as this may cause adverse effects.
- Do not place appliances that produce naked flames in places exposed to the airflow from the unit as this may impair combustion carried out by such appliances.
- Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units. Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.
- Do not sit or hang on the panel. The panel may fall, and injury or product malfunction may result.
- Do not sway the panel around. The panel may hit people or objects, and injury or property damage may result.
- Do not let children play with or around the panel. Injury or property damage may result.
- Do not pull the wires of the appliance. The wires may be broken, as this may result in electric shocks or property damage may result.
- Do not locate obstacles in the path of the front panel. The front panel may fall, and injury or property damage may result.
- Do not bend or damage the wires. The wires may be broken, and injury or property damage may result.
- Do not put objects on the front panel, or otherwise production malfunctioning may result.



- To avoid oxygen depletion, ensure that the room is adequately ventilated if equipment such as a burner is used together with the appliance.

Safety Precautions

- Do not place objects around the appliance. Doing so may have an adverse influence on the performance, product quality, and life of the appliance.

About the outdoor unit



- Do not block the air inlets nor outlets. Impaired airflow may result in insufficient performance or trouble.
- Do not sit on the outdoor unit, put things on the unit, or pull the unit. Doing so may cause accidents, such as falling or toppling down, thus resulting in injury, product malfunction, or product damage.
- After prolonged use, check the appliance stand and mounts for damage. If they are left in a damaged condition, the appliance may fall and cause injury.
- To avoid injury, do not touch the air inlet or aluminium fins of the indoor or outdoor units.



- Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit.
Leaves are a hotbed for small animals which can enter the unit. Once inside the appliance, such animals can cause malfunctions, smoke or fire if they come into contact with electrical parts.

About the remote controller



- Do not insert the batteries in the wrong polarity (+/-) orientation as this may result in short circuit, fire, or battery leakage.
- Locate the remote controller in places out of reach of children. The wrong operation of the remote controller and accidents in the case of child accidentally has swallowed batteries may result in injury.

When using the air conditioner



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Impairment of bodily functions and harm to health may result.



- Children should be supervised to ensure that they do not play with the appliance or remote controller.
Accidental operation by a child may result in impairment of bodily functions and harm health.
- Avoid impacts to the appliances, or otherwise product damage may result.
- Be careful not to let pets urinate on the appliance. Urination on the appliance may result in electric shock or fire.

When cleaning



- Do not wash the air conditioner with water, as this may result in electric shock or fire.
- Do not place water containers (vases, etc.) above the unit, as this may result in electric shock or fire hazards if they should topple over.
- Do not stand on an unstable surface when operating or maintaining the appliance, or otherwise you may topple over or injure yourself.



- Before cleaning, be sure to stop unit operation and turn off the circuit breaker. Otherwise, an electric shock and injury may result.

This is an appliance that is not accessible to the general public.

■ Be sure to follow the instructions below.


- The indoor unit is at least 1m away from any television or radio set (unit may cause interference with the picture or sound).
- Refrain from using the units in areas prone to high levels of oily smoke, such as a kitchen.
Water leakage may result.

Names of Parts

■ Indoor Unit

FTKM09/12/15*/18*/24*

* The appearance of indoor units may differ from some model

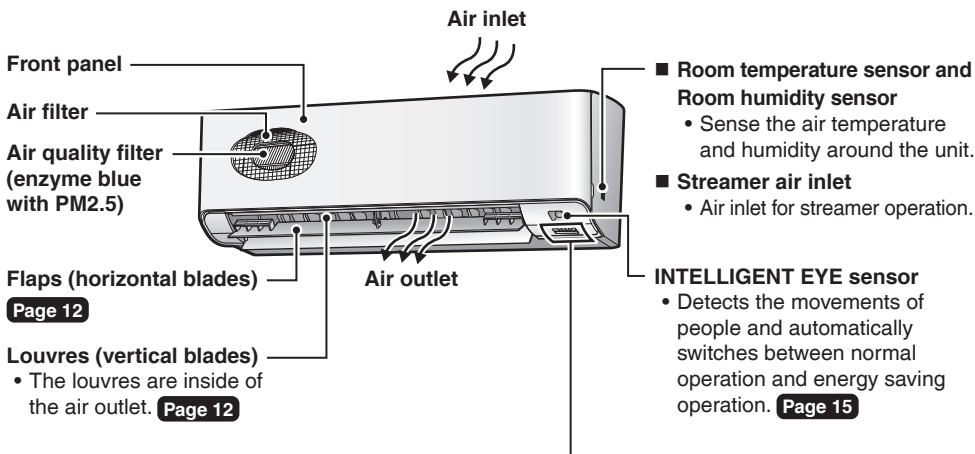

Display

MOLD PROOF lamp (Green)

Page 17

TIMER lamp (Orange)

Page 22, 23

Indoor unit ON/OFF switch and OPERATION lamp (Green)

- Press this switch once to start operation.
Press once again to stop it.
- For the operation mode setting, refer to the following table.

Mode	Temperature setting	Airflow rate
COOL	22.0°C	AUTO

- This switch can be used when the remote controller is missing or out of batteries.

STREAMER lamp (Green)

Page 19

Wireless LAN connecting adapter lamp (Orange)

Page 24

Signal receiver:

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a beep sound.


Case	Sound type
Operation start	beep-beep
Setting change	beep
Operation stop	long beep

List of lamps

Lamp	Colour	State	Description
OPERATION lamp	green	Lights up	The air conditioner is running.
		Blinks	Check the error code.
TIMER lamp	orange	Lights up	TIMER is set. Page 22, 23
MOLD PROOF lamp	green	Lights up	MOLD PROOF operation. Page 17
STREAMER lamp	green	Lights up	STREAMER operation. Page 19
Wireless LAN connecting adapter lamp	orange	Lights up	Wireless LAN connecting adapter operation. Page 24
		Blinks	Wireless LAN connecting adapter is connected. Page 24

Names of Parts


■ Open the front panel

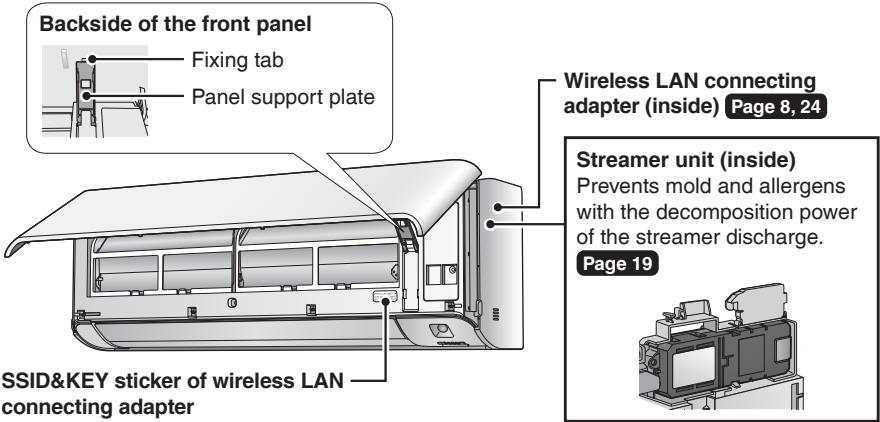


■ Outdoor Unit

RKM09*/12*/15/18/24

* The appearance of outdoor units may differ from some model

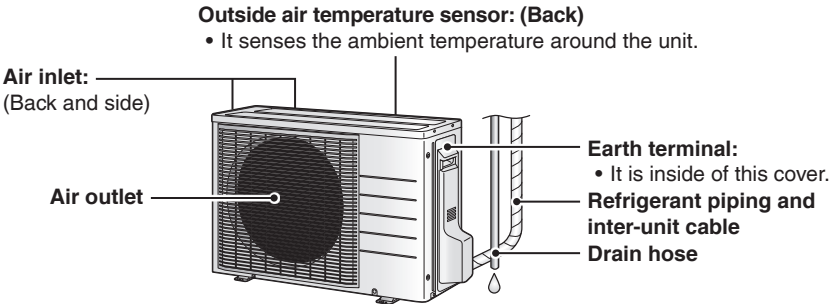

■ Remote Controller

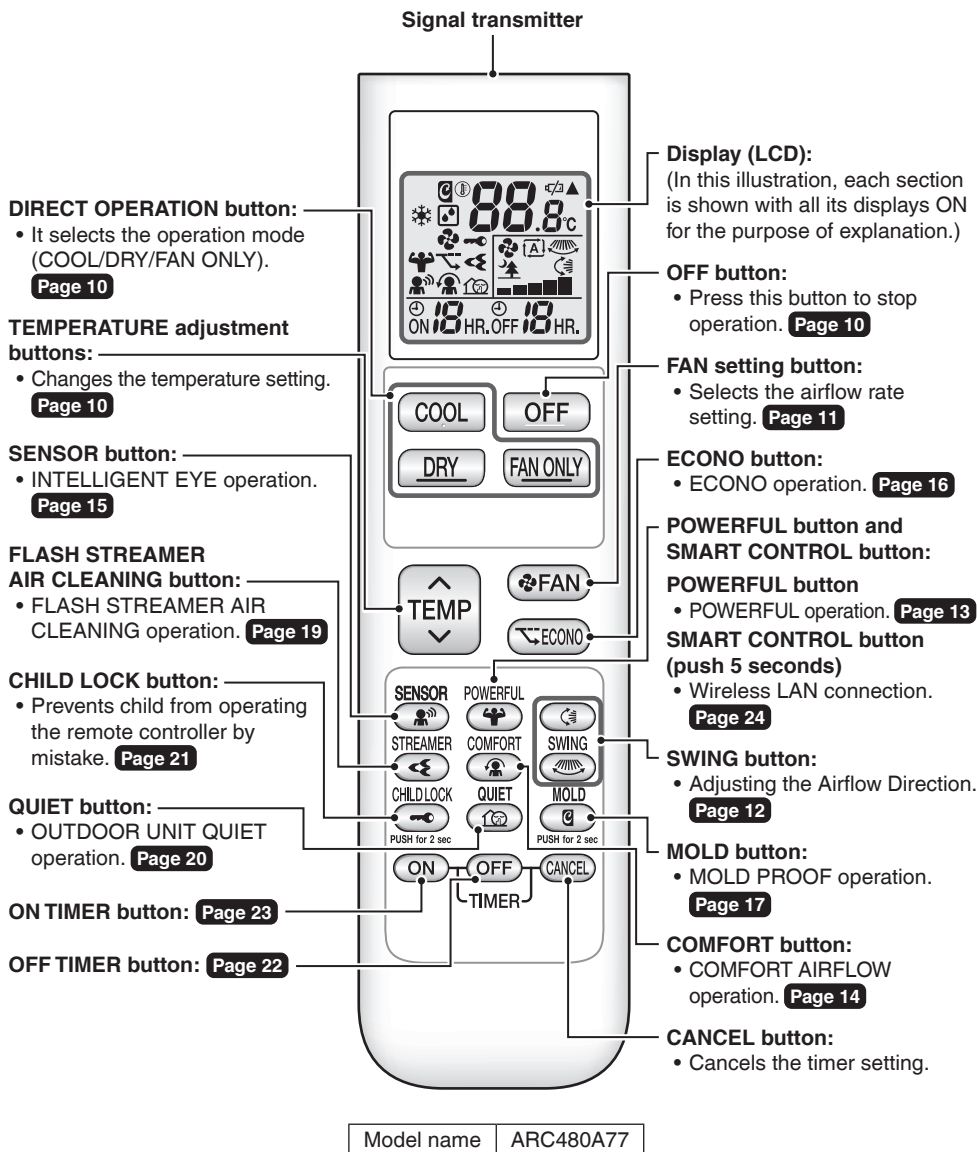



About smart control

Wireless LAN connecting adapter

The wireless LAN connecting adapter function requires the DAIKIN Mobile controller application for connecting to the air conditioner and controlling it via your smartphone or tablet over your network.

ATTENTION

- Attach the sticker to the sticker attachment area on the cover page of the operation manual and keep it safe, as in the detail below:

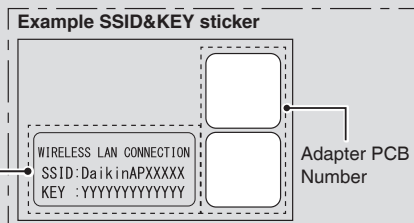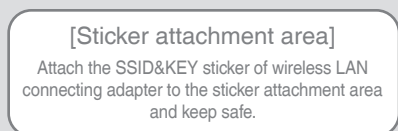


[About the SSID and KEY]

- The [SSID] and [KEY] shown on the SSID&KEY sticker are necessary when connecting the air conditioner to a smartphone via wireless LAN.

■ Configuration

- The user is responsible for providing the following items before using this product:
 - Smartphone or tablet (Supported OS: Android 8.0 or later; iOS 11.0 or later. For the latest version, refer to the web site <https://www.daikinthal.com/product/dmobile/compatible>).
 - Wireless LAN access point and communicating device (Modem/router or similar device)
 - Application name: [DAIKIN Mobile Controller] (free)
(application version 4.8 or higher is needed to control this product)

For details on the installation method for the DAIKIN Mobile Controller application, please see **▶ Page 24**.

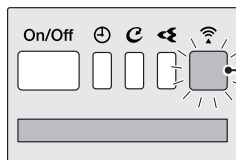

Display

Wireless LAN connecting adapter lamp (Orange)

- The wireless LAN connecting adapter lamp lights when connecting to a router (Wireless LAN access point). Please see **▶ Page 24**.
- For wireless LAN connecting adapter operation, please see **▶ Page 25**.

NOTE

■ Notes on the wireless LAN connecting adapter

- Do not use this product near a microwave oven. (This can affect wireless LAN communications.)
- While the wireless LAN connecting adapter operates, it may affect persons using cardiac pacemakers or defibrillators. This product may cause electromagnetic interference.
- While the wireless LAN connecting adapter operates, it may affect automatic doors or fire alarm equipment. This product may cause faulty behaviour of the equipment.
- For the latest details about installation of the wireless LAN connecting adapter and applicable units, refer to the web site <https://www.daikinthal.com/product/dmobile> .

Voice controller

You can use voice commands via Google Home or Amazon Alexa or other to control the air conditioner. To use this function, please follow the setup guide at the website below.

Web site: <https://www.daikinthal.com/product/dmobile/voicecontrol/>.

For more information on the latest version of the voice control function, please refer to the website above or scan the QR code.





Preparation Before Operation

■ To set the batteries




Position ⊕ and ⊖ correctly!

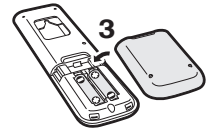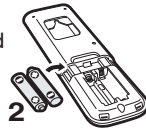


■ To operate the remote controller

- To use the remote controller, aim the transmitter at the indoor unit. If there is anything blocking signals between the unit and the remote controller, such as a curtain, the unit will not operate.
- Do not drop the remote controller. Do not get it wet.
- The maximum distance for communication is about 7m.

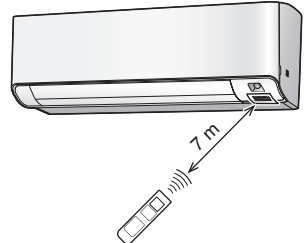

■ To fix the remote controller holder on the wall

1. Choose a place from where the signals reach the unit.
2. Fix the holder to a wall, a pillar, etc. with the screws supplied with the holder.
3. Place the remote controller in the remote controller holder.

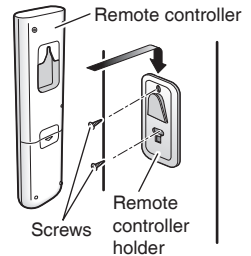

■ Turn the breaker on

- After the power is turned on, the flaps of the indoor unit open and closes once to set the reference position.

ATTENTION


■ About batteries

- The batteries will last for approximately one year. If the remote controller display begins to fade and the degradation of reception performance occurs within a year, however, replace both two batteries with new size AAA.LR03 (alkaline) batteries.
- When the system is not used for a long time, take the batteries out.
- The attached batteries are provided for the initial use of the system. The usable period of the batteries may be short depending on the manufactured date of the air conditioner.
- When battery power has run out, “ ” will begin blinking as an alert that the batteries need replacing. In some cases, when battery consumption is accelerated owing usage conditions, signal reception may decline before “ ” begins blinking.

■ About remote controller

- Never expose the remote controller to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult the shop if that is the case.
- If the remote controller signals happen to operate another appliance, move that appliance to somewhere else, or consult the shop.

COOL/DRY/FAN ONLY Operation

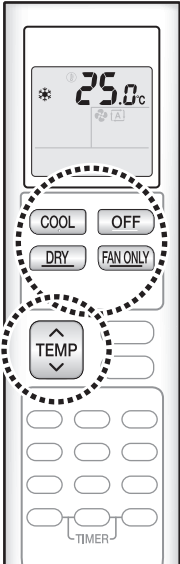

The air conditioner operates in the user selected operation mode.

■ To start operation

■ Press button of your desired operation mode.

COOL operation


- Press **COOL** . “❄” appears on the LCD

DRY operation

- Press **DRY** . “☁” appears on the LCD

FAN ONLY operation

- Press **FAN ONLY** . “🌀” appears on the LCD

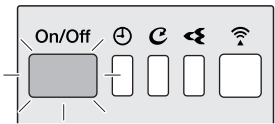

COOL/DRY/FAN ONLY operation
The OPERATION lamp lights green.

- Operation mode can be changed while operating by pressing your desired operation mode button.

■ To stop operation

■ Press **OFF** .

- Then OPERATION lamp goes off.

■ To change the temperature setting

■ Press **TEMP** .

- The displayed items on the LCD will change whenever either one of the buttons is pressed.

COOL operation	DRY or FAN ONLY operation
16-32°C	The temperature setting is not available.
Press ▲ to raise the temperature and press ▼ to lower the temperature. Each pressing of the button changes the temperature by 0.5°C.	

NOTE

MODE	Notes on each operation mode
COOL	• This air conditioner cools the room by releasing the heat in the room outside. Therefore the cooling performance of the air conditioner may be decrease if the outdoor temperature is high.
DRY	• The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable. • When the indoor temperature rises, COOL operation automatically starts.
FAN ONLY	• This mode is valid for fan only.

Adjusting the Airflow Rate


You can adjust the airflow rate to increase your comfort.



■ To adjust the airflow rate setting

● Press **FAN**.

- Each pressing of **FAN** change the airflow rate setting in sequence shown below.

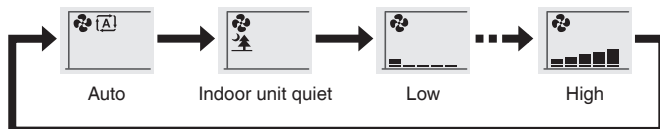

- When the airflow is set to “”, indoor unit quiet operation will start and the noise from the unit will become quieter.
- In indoor unit quiet operation, the airflow rate is set to a weak level.
- In DRY mode, the airflow rate setting is not available.
- If the temperature does not reach the desired point, change the airflow rate setting.
- If COOL/DRY operation is started with airflow settings on “AUTO”, the indoor unit will initially deodorise, which functions to suppress any internal odours. As a result, the indoor unit will not emit air immediately. (Wait for about 1 minute.)
- At smaller airflow rates, the cooling effect is also smaller.

Tips for saving energy

- Be careful not to cool the room too much.
Keeping the temperature setting at a moderate level helps save energy.
- Recommended temperature setting for cooling is 26-28°C.
- Cover windows with a blind or a curtain.
Blocking sunlight and air from outdoors increases the cooling effect.
- Clogged air filters cause inefficient operation and waste energy.
Clean them once in about every 2 weeks.

Adjusting the Airflow Direction



You can adjust the airflow direction to increase your comfort.

ATTENTION

- Always use a remote controller to adjust the angles of the flaps and louvres.
- If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Inside the air outlet, a fan is rotating at a high speed.


[To operate automatically]

■ To adjust the flaps (horizontal blades)

Up and down airflow direction

Press .

- “” appears on the LCD.
- The flaps (horizontal blades) will begin to swing.

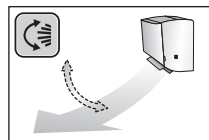


■ To adjust the louvres (vertical blades)

Right and left airflow direction

Press .


- “” appears on the LCD.
- The louvres (vertical blades) will begin to swing.

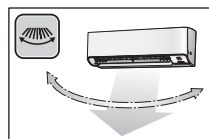

■ The 3-D airflow direction

Press  and .

- “” and “” appear on the LCD.
- The flaps and louvres move in turn.
- To cancel 3-D airflow, press either  or  again.
- The flaps or louvres will stop moving.

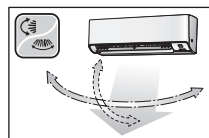

[To operate manually]

■ To set the flaps or louvres at the desired position

- This function is effective while the flaps or louvres are in auto swing mode.

Press  and  when the flaps or louvres reach the desired position.

- In the 3-D airflow, the flaps and louvres move in turn.
- “” or “” disappears from the LCD.

NOTE


■ Note on airflow direction setting

- The movable range of the flaps varies according to the operation mode, refer to the right picture.

■ Note on 3-D airflow

- Using 3-D airflow circulates cold air, which tends to collect at the bottom of the room, preventing areas of cold developing.

Movable range of the flaps

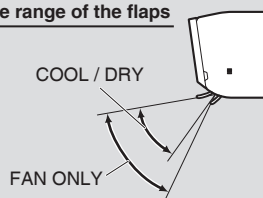

POWERFUL Operation



POWERFUL operation quickly maximizes the cooling effect in any operation mode. You can get the maximum capacity.

■ To start

➤ Press ^{POWERFUL}  during operation.

- POWERFUL operation ends in 20 minutes.
Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
- “” appears on the LCD.

■ To cancel

➤ Press ^{POWERFUL}  again.

- “” disappears from the LCD.

NOTE

■ Notes on POWERFUL operation

- When ^{POWERFUL}  button is pressed after press  or  button to start COOL or DRY operation, the air conditioner will work in quick cooling operation (under the condition that the indoor temperature level will be 25~37°C DB/outdoor temperature level will be 25~43°C DB.), the compressor and indoor fan will work at high speed to help cooling faster than normal POWERFUL operation.
- POWERFUL operation can only be set when the unit is running. Pressing  causes the settings to be canceled, and “” disappears from the LCD.
- POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.
 - In **COOL operation**
To maximise the cooling effect, the capacity of outdoor unit increases and the airflow rate becomes fixed at the maximum setting.
The temperature and airflow settings cannot be changed.
 - In **DRY operation**
The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.
 - In **FAN ONLY operation**
The airflow rate is fixed at the maximum setting.

Regarding the combination of POWERFUL and other operations

POWERFUL + COMFORT AIRFLOW	Not available*
POWERFUL + ECONO	
POWERFUL + OUTDOOR UNIT QUIET	

*Priority is given to the function of whichever button is pressed last.

COMFORT AIRFLOW Operation



The flow of air will be in the upward direction while in COOL/DRY operation, which will provide a comfortable wind that will not come in direct contact with people.

■ To start

Press .

- “” appears on the LCD.

	COOL operation	DRY operation
Flaps direction	Goes up	
Airflow rate	The airflow rate can be set to any level	AUTO

- Not available in FAN ONLY Mode.

■ To cancel

Press .

- “” disappears from the LCD.


NOTE

■ Notes on COMFORT AIRFLOW operation

- The flaps position will change, preventing air from blowing directly on the occupants of the room.
- POWERFUL operation cannot be used together with ECONO/COMFORT AIRFLOW/ OUTDOOR UNIT QUIET operation.
Priority is given to the function of whichever button is pressed last.
- The flow of air will be in the upward direction while in COOL/DRY operation, which will provide a comfortable wind that will not come in indirect contact with people.

COMFORT AIRFLOW Operation (COOL/DRY mode)

- Direction of the flaps: Upward (ceiling airflow)

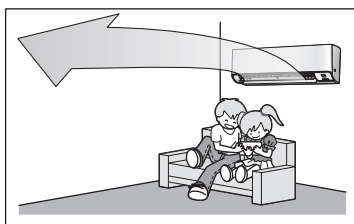

INTELLIGENT EYE Operation



“INTELLIGENT EYE” is the infrared sensor which detects the human movement. If no one is in the room for more than 20 minute, the operation automatically changes to energy saving operation.

ATTENTION

- Do not place large objects near the INTELLIGENT EYE sensor. Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect undesirable objects.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

■ To start

- Press  .
- “” appears on the LCD.

■ To cancel

- Press  again.
- “” disappears from the LCD.

NOTE


■ Energy saving operation

- If no presence detected in the room for 20 minutes, the energy saving operation will start.
- This operation changes the temperature by +2°C in COOL / +2°C in DRY operation from the set temperature. When the room temperature exceeds 30°C, the operation changes the temperature by +1°C in COOL / +1°C in DRY operation from the set temperature.
- This operation decreases the airflow rate slightly in FAN operation only.

■ Notes on INTELLIGENT EYE operation


- While the air conditioner is in INTELLIGENT EYE operation. If no people are detected in sensing area within 20 minutes, the air conditioner will go into energy-saving mode with the set temperature shifted by 2°C. The air conditioner may go into energy saving operation even if there are people in the area. This may occur depending on the clothes the people are wearing if there are no movements of the people in the area.
- Due to the position of the sensor, people might be exposed to the airflow of the indoor unit if they are close to the front side of the indoor unit.
- Sensor may not detect moving objects further than 7m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor could also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.

Vertical angle 90°
(Side View)

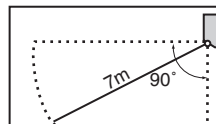

Application range is as follows.

ECONO Operation

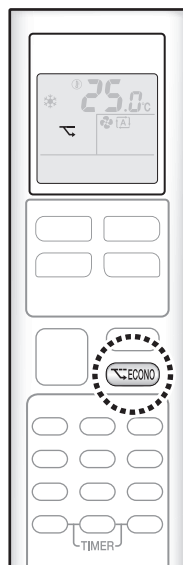

ECONO operation is a function which enables efficient operation by limiting the maximum power consumption value.

This function is useful for cases in which attention should be paid to ensure a circuit breaker will not trip when the product runs alongside other appliances.

■ To start

- Press  .
- “” appears on the LCD.

■ To cancel

- Press  again.
- “” disappears from the LCD.

NOTE

■ Notes on ECONO operation

- ECONO Operation can only be set when the unit is running. Pressing  causes the setting to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in COOL and DRY operation.
- POWERFUL operation cannot be used together with ECONO/COMFORT AIRFLOW/OUTDOOR UNIT QUIET operation.
Priority is given to the function of whichever button is pressed last.
- If the power consumption level is already low, switching to ECONO operation will not reduce the power consumption.

MOLD PROOF Operation




MOLD PROOF operation is a function which reduces the spread of mold by using FAN operation to lower the humidity inside the indoor unit.

[To operate automatically]

■ To set

● Press  and hold the button for 2 seconds.

- “” appears on the LCD.
- After DRY or COOL operation stops, the air conditioner starts MOLD PROOF operation automatically.
- MOLD PROOF operation lamp lights green and FLASH STREAMER AIR CLEANING operation lamp lights up green.

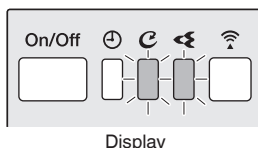

■ To cancel


● Press  and hold the button for 2 seconds one more time.

- “” disappears from the LCD.

[To operate manually]


● Press  for about 2 seconds while the unit is not operating.

- “” blinks on the LCD, and the display returns to normal after a while.
- If the air conditioner is turned off for more than 3 minutes, press  once again and hold the button for 2 seconds to start MOLD PROOF operation.
- MOLD PROOF operation lamp lights green and FLASH STREAMER AIR CLEANING operation lamp lights up green.

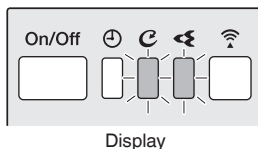

MOLD PROOF Operation

[Flow of function]

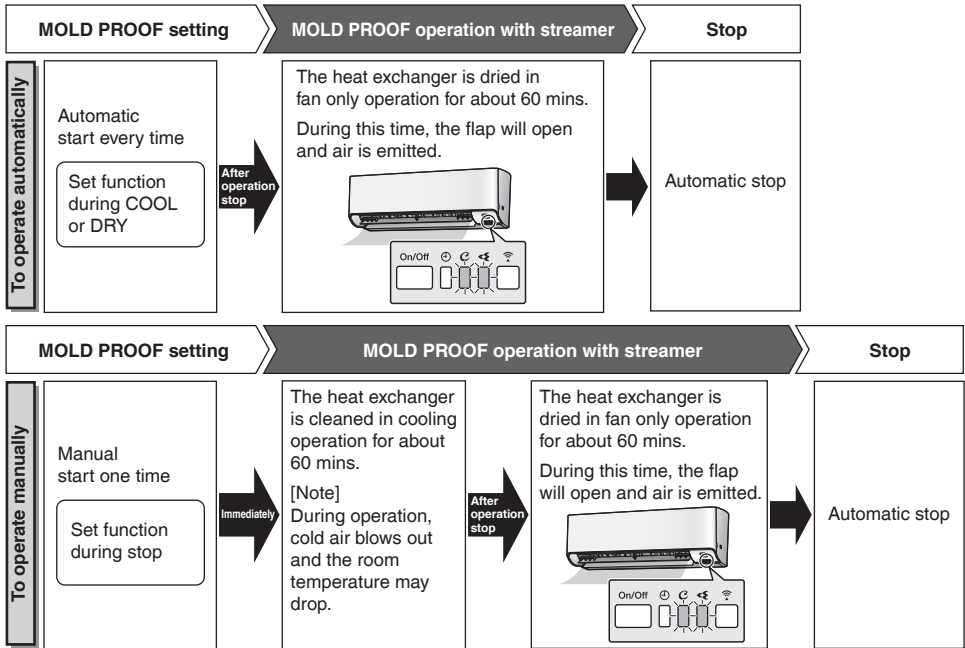

NOTE

- Notes on MOLD PROOF setting
- When you want to stop MOLD PROOF operation midway, press .
 - This operation dries the inside of the air conditioner while streamer discharge is performed to reduce the development of mold and odour inside the air conditioner. But the function does not remove any adhered dust and mold.
 - MOLD PROOF operation is not available when the unit is turned off using the OFF TIMER or turned off using a smartphone.
- Notes on MOLD PROOF operation
- The flaps may sometimes close to increase the drying effect inside the air conditioner.
 - MOLD PROOF operation may not be performed if the COOL or DRY operation time is short.
 - If MOLD PROOF operation does not suit your preference, please stop operation. **Page 17**
- Relation between MOLD PROOF operation and indoor unit lamps

Air conditioner	MOLD PROOF setting	MOLD PROOF lamp	STREAMER lamp
 Air conditioner operating	MOLD PROOF is "ON"	Lights up	Depends on STREAMER setting
	MOLD PROOF is "OFF"	Goes off	
 Air conditioner not operating	MOLD PROOF is "ON"	Lights up	Lights up

FLASH STREAMER AIR CLEANING Operation




The streamer generates a high-speed electron stream with a high oxidizing power, reducing bad odours and viruses. Together with the Air quality filter (enzyme blue with PM2.5) and the air filters, this function cleans the air in the room.

■ To start

Press  .

- “” appears on the LCD.
- FLASH STREAMER AIR CLEANING operation lamp lights green.

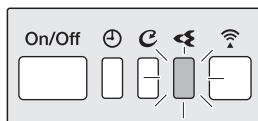

Display

■ To cancel

Press  again.

- “” disappears from the LCD.

NOTE

■ What is streamer discharge?

- This is a type of plasma discharge comprising high-speed electrons with a high oxidative capacity that is released within the unit.
It decomposes odours and harmful gases.
(The high-speed electrons are generated and then adsorbed within the unit ensure your safety.)

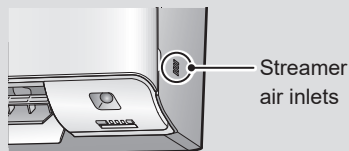


Fig. 1

■ Notes on FLASH STREAMER AIR CLEANING operation

- The streamer discharge may generate a fizzing sound, however this does not indicate a defect.
- Do not block the air inlets of the streamer with any objects (**Fig.1**).
Impaired airflow may result in insufficient performance or trouble with streamer operation.

OUTDOOR UNIT QUIET Operation



OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

■ To start

Press .

- “” appears on the LCD.
- The air conditioner can operated in ECONO operation combined with OUTDOOR UNIT QUIET operation.

■ To cancel

Press  again.

- “” disappears from the LCD.

NOTE

■ Note on OUTDOOR UNIT QUIET operation

- This function is available in COOL operation. (This is not available in FAN ONLY and DRY mode.)
- POWERFUL operation cannot be used together with ECONO/COMFORT AIRFLOW/OUTDOOR UNIT QUIET operation.
Priority is given to the function of whichever button is pressed last.
- OUTDOOR UNIT QUIET Operation will drop neither the frequency nor fan speed if the frequency and fan speed have been already dropped low enough.
- Even the operation is stopped by using the remote controller or the indoor unit ON/OFF switch using OUTDOOR UNIT QUIET operation, “” will remain on the remote controller display.
- This operation is performed with lower power and therefore may not provide a sufficient cooling effect.

CHILD LOCK operation



To prevent mishandling by children

Setting the CHILD LOCK disables all the buttons except the CHILD LOCK button. This function prevents children from operating the remote controller by mistake.

■ To start

- Press  for about 2 seconds.

- “” appears on the LCD and buttons except  is disabled.

■ To cancel

- Press  about 2 seconds again.

- “” disappears from the LCD.

TIMER Operation



Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning.

You can also use OFF TIMER and ON TIMER in combination.

[OFF TIMER operation]

■ To set


1. Press **OFF**.



- “**OFF** **HR.**” appears on the LCD.

2. Press **OFF** until the time setting reaches the point you like.

- Each pressing of button increases the time setting by 1 hour.
- Setting time can be increased to 12 hours maximum.
- The TIMER lamp lights orange.

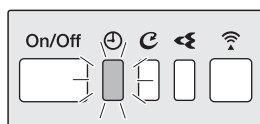

Display

■ To cancel

1. Press **CANCEL**.

- “**OFF** **HR.**” disappears from the LCD.
- The TIMER lamp goes off.

NOTE

■ NIGHT SET MODE

- When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL) to prevent excessive cooling for your pleasant sleep.



[ON TIMER operation]

■ To set


1. Press **ON** .



• “ON 1 HR.” appears on the LCD.

2. Press **ON** until the time setting reaches the point you like.

- Each pressing of button increases the time setting by 1 hour.
- Setting time can be increased to 12 hours maximum.
- The TIMER lamp lights orange.

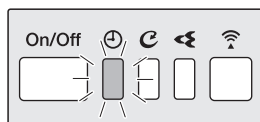

Display

■ To cancel

1. Press **CANCEL** .

- “ON 1 HR.” disappears from the LCD.
- The TIMER lamp goes off.

[ON/OFF TIMER combination]

■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the 2 timers is shown below.
- When setting while unit is operating.

(Example)

Turn off unit in the next 1 hr.) Combined
Turn on unit in the next 8 hr. (7 hr. after turn off)



- When setting while unit is stopped.

(Example)

Turn on unit in the next 2 hr.) Combined
Turn off unit in the next 5 hr. (3 hr. after turn on)



ATTENTION

■ In the following cases, set the timer again.

- After a breaker has turned OFF.
- After a power failure.
- After replacing batteries in the remote controller.

Wireless LAN connection

Please note


- Turn off the air conditioner before setting up wireless connection.

Prior to setting up, please make sure your device is ready to connect.

You may refer to the indoor unit LED table for guidance.

Check the indoor unit LED.

Wireless LAN connecting adapter lamp	Status
Blinks for every one second	• The wireless LAN connecting adapter is ready to connect or fail to connect.
No blinking/no light	• The wireless LAN connecting adapter is disabled. (OFF) • Malfunction in communication between the indoor unit and the wireless LAN connecting adapter. Please refer to the troubleshooting guide or contact the store where you bought the air conditioner to request a repair service.
Lamp stays lit	• The wireless LAN connecting adapter is connected to a modem/router.

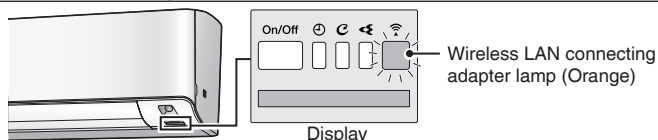

Wireless LAN connection

Web site: <https://www.daikinthal.com/product/dmobile> . For more information on the latest version of wireless LAN control, please refer to the above website.

■ Application software installation

- Before downloading the application software for installation, please read “Configuration” on **▶Page 8**.

■ For Android phones

- 1) Open [Google Play].
- 2) Search using the application name: [DAIKIN Mobile Controller].
- 3) Follow the on-screen instructions for installation.



■ For iOS phones

- 1) Open [App Store].
- 2) Search using the application name: [DAIKIN Mobile Controller].
- 3) Follow the on-screen instructions for installation.



■ Setting

■ Connect the wireless LAN connecting adapter to your home network.


- The wireless LAN connecting adapter will communicate with the smart devices in your home network via a modem, router, or a similar device.

There are two options for connecting the wireless LAN connecting adapter to your smart phone or tablet:

- 1) Simple connection (WPS connection), if there is a WPS button on the router **▶Page 26** .
- 2) Access point connection (AP connection), if there is no WPS button on the router **▶Page 27** .

For more information and Frequently Asked Questions, please refer to:


<https://www.daikinthal.com/product/dmobile> .

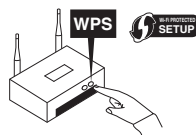

NOTE

■ Note on wireless LAN connection

- For more information on how the wireless LAN connecting adapter operates, please see **▶Page 25-27** .

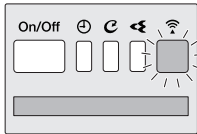

Display

Enabling/disabling the wireless LAN connecting adapter

■ To enable

1. While operation is stopped, press **POWERFUL** and hold the button for 5 seconds.

- “SP” appears on the LCD.
- “” (SP menu) blinks.



2. Press **TEMP** or **TEMP** and select SP menu **!**.

3. Press **POWERFUL** to confirm the selected setting.

- “▲” blinks briefly.
- The wireless LAN connecting adapter lamp (orange) blinks for every one second.



4. Press **CANCEL** to return to the default screen.

■ To disable

1. While operation is stopped, press **POWERFUL** and hold the button for 5 seconds

- “SP” appears on the LCD.
- “” (SP menu) blinks.



2. Press **TEMP** or **TEMP** and select SP menu **off**.

3. Press and hold **POWERFUL** for 2 seconds to confirm the selected setting.

- “▲” blinks briefly.
- The wireless LAN connecting adapter lamp (orange) goes off.




4. Press **CANCEL** to return to the default screen.

NOTE

■ Note on SP-3 menu

- SP-3 menu cannot be used on this air conditioner. Do not need to activate. If you accidentally activated this menu, the wireless LAN connecting adapter lamp blinks constantly. Please follow the steps below to solve the problem. There are 2 ways to deactivate SP-3 menu.
 - 1) Turn off the wireless LAN connecting adapter and then turn it on again.
 - 2) Turn off the air conditioner circuit breaker and then turn it on again.

Wireless LAN connection

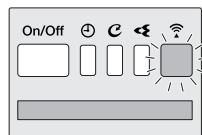

Display



Fig. 1



To connect the wireless LAN connecting adapter to your home network

The wireless LAN connecting adapter can be connected to your home network by means of:

- Simple connection (WPS connection), if there is a WPS button on the router.
- Access point connection (AP connection), if there is no WPS button on the router.

■ Simple connection (WPS connection)

If there is a WPS button on your Wi-Fi router, please follow the below steps.

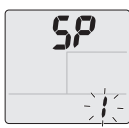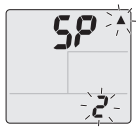
1. While operation is stopped, press **POWERFUL** and hold the button for 5 seconds.
 - “SP” appears on the LCD.
 - “” (SP menu) blinks.
2. Press **TEMP** or **TEMP** and select SP menu **2**.
3. Press **POWERFUL** to confirm the selected setting.
 - “▲” blinks briefly.
 - The wireless LAN connecting adapter lamp (orange) blinks more quickly.
4. Press the WPS button on your communication device (e.g. router) within approximately one minute. Please refer to the manual of your communication device.
 - The wireless LAN connecting adapter lamp (orange) stays lit.

If you fail to connect, refer to **NOTE**.
5. Press **CANCEL** to return to the default screen.
6. Connect your smart phone to your home network.
7. Open the Home screen of the DAIKIN Mobile Controller application. The air conditioner will be listed there (Fig.1).

NOTE

■ Note on simple connection (WPS connection)

- If you fail to connect (the wireless LAN connecting adapter lamp (orange) continues to blink), repeat steps 1-5.
- Alternatively, try connecting via your device directly. Please refer to “Access point connection (AP connection)” **Page 27**.

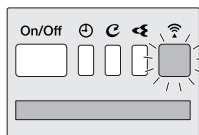

Display

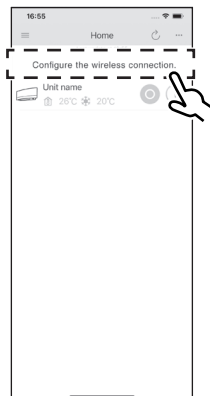


Fig. 2

■ Access point connection (AP connection).

If your home Wi-Fi router does not have a WPS button, you can connect your smart phone directly to the wireless LAN connecting adapter in order to set up a connection to your home network by following these steps.

- This step requires SSID number and KEY located on the indoor unit or on the cover of the manual.

1. Connect the wireless LAN connecting adapter to a smart phone or tablet.

View available Wi-Fi networks on your smart phone or tablet and connect to the SSID (DaikinAP*****) printed out on the sticker. SSID and KEY are located on the indoor unit or on the cover of the manual, as shown in the below image.

• Sticker on the indoor unit



SSID&KEY sticker

WIRELESS LAN CONNECTION
SSID: DaikinAPXXXX
KEY : YYYYYYYYYYYY

• Sticker on the cover of the manual



2. Open the DAIKIN Mobile Controller application and select “Configure the wireless connection” (Fig.2) and connect to your home network as per the on-screen instructions.

• The wireless LAN connecting adapter lamp (orange) stays lit.
If you fail to connect, refer to **NOTE**.

3. Connect your smart phone to your home network.

4. Open the Home screen of the DAIKIN Mobile Controller application. The air conditioner will be listed there.

Reset connection setting to factory defaults.

Please note

When the device is reset, out-of-home user account and wireless LAN connection setting will be changed back to the factory defaults.

■ To reset

1. While operation is stopped, press and hold the button for 5 seconds.

• “SP” appears on the LCD.

• “” (SP menu) blinks.




2. Press or and select SP menu .

3. Press and hold for 2 seconds to confirm the selected setting.

• “▲” blinks briefly.

• The wireless LAN connecting adapter lamp (orange) blinks for every one second.



4. Press to return to the default screen.

NOTE

■ Note on access point connection (AP connection)

• If you fail to connect (the wireless LAN connecting adapter lamp (orange) continues to blink), repeat steps 1-2.

Care and Cleaning

⚠ CAUTION

- Before cleaning, be sure to stop operation and turn the breaker OFF.
- When opening and closing the front panel, use a robust and stable stool and watch your step carefully.
- After cleaning, make sure that the front panel is securely fixed.

Units


Wipe them with a dry soft cloth.



■ Front panel

1. Open the front panel.

- Open the front panel.
- Push the panel support plate up.
- Insert the panel support plate behind the fixing tab. The front panel will now be secured in the open position.

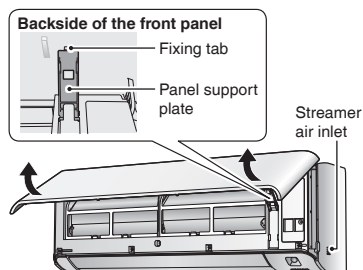

2. Clean the front panel.

If the front panel is dirty

- Wipe it with a soft damp cloth.
- Only neutral detergent may be used.



If the backside of the front panel is dirty, wipe it with a soft damp cloth.

3. Close the front panel

- Lift up the front panel and panel support plate slightly to release the panel support plate from behind the fixing tab.
- Pull the panel support plate down, returning it to the original position.
- Close the front panel slowly.
(Press the panel at both sides and in the central area.)
- Make sure that the front panel is securely fixed.



NOTE

■ Notes on cleaning the front panel.

- Do not wash in water.
- Do not tear a heat insulation material.
- Do not press or rub a heat insulation material.

■ Note on Streamer air inlet

- Do not place objects around the indoor unit. Doing so may have an adverse influence on the performance, product quality, and life of the streamer.
- Risk of fire or malfunction. Do not clean the inside of the air conditioner by yourself.
Do not direct flammable sprays, deodorisers or wash with water at the streamer unit.


CAUTION

- Do not touch the aluminum fins by bare hand at the time of dismantling or mounting the filter.

■ Air filter


1. Pull out the air filters.

- Open the front panel. **Page 28**
- Push the filter tab at the centre of each air filter a little upwards, then pull it down.

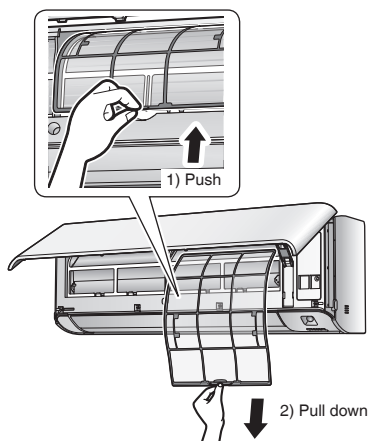

2. Wash the air filters with water or clean them with vacuum cleaner.

- It is recommended to clean the air filters every 2 weeks.

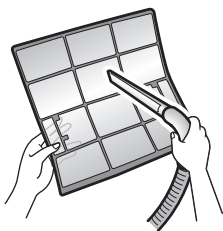

Use a vacuum cleaner to remove dust.



If the dust does not come off easily

Wash the air filters with neutral detergent thinned with lukewarm water, then dry them up in the shade.

Be sure to remove the filter (small).

Refer to "**Filter (small)**" on the next page

3. Set the filters as they were and close the front panel.

- Press the front panel at both sides and the centre.

Care and Cleaning


■ Filter (small)

* For the applicable filter type, please refer to **NOTE** on **Page 31**.

1. Open the front panel and pull out the air filter. **Page 28, 29**

2. Take off the filters. (small)

- Hold the recessed parts of the frame and unhook the 4 claws.
- Remove the filters from the tabs.

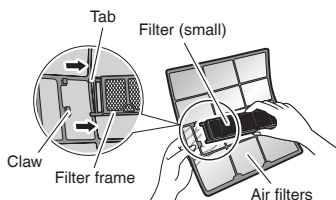

3. Clean or replace the filters.

[Cleaning]

Air quality filter (enzyme blue with PM2.5) [blue-white] or dust collection filter (PM2.5) [white]

- Do not wash the filters as this will reduce their efficiency.
- It is recommended to replace it once **every 6 months**.

Deodorizing filter (enzyme blue) [blue] or titanium apatite deodorizing filter [blue-black]

3-1 Vacuum dust, and soak in lukewarm water or water for about 10 to 15 minutes if very dirty.

3-2 After washing, shake off remaining water and let them dry in the shade.

- This filter can be renewed by washing it with water once **every 6 months** and we recommend replacing it once **every 3 years**.
- Do not wring out the filter when removing water from it.

[Replacement]

Remove the filter from the filter frame and prepare a new one.

- Do not throw away the filter frame.
- Reuse the filter frame when replacing the filter.
- When attaching the filter, check that the filter is properly set in the tabs.



4. Set the filters as they were and close the front panel.

- Press the front panel at both sides and the centre.

Notes on cleaning

■ For cleaning, do not use the materials as follows.

- Hot water above 40°C.
- Benzene, gasoline, thinner, other volatile oils.
- Polishing compound.
- Scrubbing brushes, other hard stuff.



NOTE

- Operation with dirty filters:
 - 1) cannot deodorize the air.
 - 2) cannot clean the air.
 - 3) results in poor cooling.
 - 4) may cause odour.
- Dispose of old filters as non-flammable waste.
- To purchase the filters (**Table 1**) or to purchase the another type, contact the dealer where you bought the air conditioner.
- The method of cleaning and replacement of the filters may differ depending on the model. Refer to the label attached to the separately sold filters themselves.

Table 1

Item	Part No.
Air quality filter (enzyme blue with PM2.5) - without frame (set of 2)	BAFP094A43
Deodorizing filter (enzyme blue) - without frame (set of 2)	BAFP094A41
Dust collection filter (PM2.5) - without frame (set of 2)	BAFP046A41
Titanium apatite deodorizing filter - without frame (set of 2)	KAF970A46

We recommend periodical maintenance.

In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a specialist aside from regular cleaning by the user. For specialist maintenance, contact the service shop where you bought the air conditioner.

The maintenance cost must be borne by the user.

Check

- Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
- Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
- Check that the drain comes smoothly out of the drain hose during COOL or DRY operation.
 - If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.

Before a long idle period

1. Operate the “MOLD PROOF”. **Page 17**
2. After operation stops, turn off the breaker for the room air conditioner.
3. Clean the air filters and set them again.
4. Take out the batteries from the remote controller.

Troubleshooting

These cases are not troubles.

The following cases are not air conditioner troubles but have some reasons. You may just continue using it.

Case	Description / what to check
Operation does not start soon. - When ON/OFF button was pressed soon after operation was stopped. - When the mode was reselected.	This is to protect the air conditioner. You should wait for about 3 minutes.
The outdoor unit emits water.	- In COOL or DRY mode - Moisture in the air condenses into water on the cool surface of outdoor unit piping and drips.
Mist comes out of the indoor unit.	This happens when the air in the room is cooled into mist by the cold airflow during cooling operation.
The indoor unit gives out odour.	- This happens when smells of the room, furniture, or cigarettes are absorbed into the unit and discharged with the airflow. We recommend that you have the indoor unit cleaned. Please consult your dealer. - Due to streamer discharge, the air outlet may emit a slight odour as trace amounts of ozone are generated. However, the amount is negligible and is not harmful to your health.
The outdoor fan rotates while the air conditioner is not in operation.	- After operation is stopped: - The outdoor fan continues rotating for about 60 seconds for system protection. - While the air conditioner is not in operation: - When the outdoor temperature is very high, the outdoor fan starts rotating for system protection.
The operation stopped suddenly. (OPERATION lamp is on.)	For system protection, the air conditioner may stop operating on a sudden large voltage fluctuation. It automatically resumes operation in about 3 minutes.
Remote controller does not work properly. - No remote controller signals are displayed. - The remote controller sensitivity is low. - The display is low in contrast or blacked out. "" on the LCD is blinking and the remote controller cannot be operated.	- The batteries are dying and the remote controller is malfunctioning. Replace all the batteries with new size AAA.LR03 (alkaline) batteries. For details, refer to "To set the batteries" of this manual. Page 9 - Battery power has run out. Replace both batteries at the same time with new size AAA.LR03 (alkaline) batteries. Leaving exhausted batteries in the remote controller can result in injury due to battery leakage, rupturing or heating, or lead to equipment failure. (Even when the "" is blinking, the OFF button remains functional.)

Case	Description / what to check
The sound of streamer discharge can no longer be heard.	• If the airflow becomes weak, the streamer discharge stops.
The room temperature does not reach the set temperature.	• If the air coming out of the air conditioner is blowing against a wall, the set temperature may not be reached correctly.
■ The unit does not receive signals from remote controller or has a limited operating range. ■ Other electronic devices start operating.	• Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult your dealer if that is in this case. • The remote controller may not function correctly if the transmitter is exposed to direct sunlight. • It is possible for any electronic devices that generate signals or infrared rays such as smartphones and game consoles placed near the unit. The signals coming from electronic devices can interfere with the remote control signal. • If the remote controller activates other electronic devices, move them away or consult your dealer.
The flaps do not start swinging immediately.	• The air conditioner is adjusting the flaps position. • The flaps will start moving soon.
A sound is heard. ■ A sound like a flow of water ■ Ticking sound ■ Clicking sound during operation or idle time ■ Clipping sound ■ Latching sound	• This sound is generated because the refrigerant in the air conditioner is flowing. • This is a pumping sound of the water in the air conditioner and heard when the water is pumped out from the air conditioner in cooling or drying operation. • This sound is generated when the size of the air conditioner slightly expands or shrinks as a result of temperature changes. • This sound is generated when the refrigerant control valves or the electrical parts operate. • This sound is heard from the inside of the air conditioner when the exhaust fan is activated while the room doors are closed. Open the window or turn off the exhaust fan. • This sound is generated when the electronic expansion valve of the outdoor unit operation stops or turns the power off and on again.
Rotating machinery causes sound. ■ Sound is heard when the vertical swing flaps and the horizontal swing flaps move.	• When the air conditioner is operating in a quiet environment and the airflow rate of the indoor unit is set to Quiet Mode or Low Mode, the motion of the swing flaps may cause sound.
Air does not come out.	■ In COOL or DRY mode • If COOL/DRY operation is started with airflow settings on "AUTO", the indoor unit will initially deodorise, which functions to suppress any internal odours. As a result, the indoor unit will not emit air immediately. (Wait for about 1 minute.)
The air conditioner continues operating even after COOL or DRY operation is stopped.	• The air conditioner is operating in MOLD PROOF mode. When you want to stop MOLD PROOF operation midway, press .

Troubleshooting

Check again.

Please check again before calling a repair person.

Case	Description / what to check
The air conditioner does not operate. OPERATION lamp is off. OPERATION lamp blinks.	• Hasn't a breaker turned OFF or a fuse blown? • Isn't it a power failure? • Are batteries set in the remote controller? • Is the timer setting correct? • Turn off the power with the circuit breaker and restart operation with the remote controller. If the OPERATION lamp is still blinking, check the error code and consult your dealer.
Cooling effect is poor.	• Are the air filters clean? • Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? • Is the temperature setting appropriate? • Are the windows and doors closed? • Are the airflow rate and the air direction set appropriately? • Are outdoor ambient temperature not in operation range? • Is the unit set to the INTELLIGENT EYE/ECONO/MOLD PROOF/OUTDOOR UNIT QUIET mode? Page 15-20
Operation stops suddenly. (OPERATION lamp blinks.)	• Are the air filters clean? • Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? • Clean the air filters or take all obstacles away and turn the breaker OFF. Then turn it ON again and try operating the air conditioner with the remote controller. If the lamp still blinks, call the service shop where you bought the air conditioner.
An abnormal functioning happens during operation.	• The air conditioner may malfunction with lightning or radio waves. Turn the breaker OFF, turn it ON again and try operating the air conditioner with the remote controller.

■ Notes on the operating conditions

- The air conditioner always consumes a small amount of electricity even while it is not operating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker off.
- Use the air conditioner in the following conditions.

MODE	Operating conditions	If operation is continued out of this range
COOL / DRY	Outdoor temperature : 19.4-46°C Indoor temperature : 16-32°C Indoor humidity : 80% max.	• A safety device may work to stop the operation. • Condensation may occur on the indoor unit and drip.

- Operation outside this humidity or temperature range may cause a safety device to disable the system.

Wireless LAN connecting adapter

The following table provides brief descriptions of how to handle problems or carry out connection setting. Refer to the FAQ on our web site for more details.

Wireless LAN connection

Case	Description / what to check
While using the application "In-home" mode. The device (air conditioner) cannot be found on the application screen.	• Carry out connection setting again. • Move the router (wireless LAN access point) close to the air conditioner. • There is a possibility that you are using an unsupported smart phone or router (wireless LAN access point). For details, refer to the web site. • If using iOS 15 or later: - Turn off mobile data when connecting to an access point connection (AP connection). (Smartphone connects to the wireless LAN connecting adapter directly.) - When using the application for the first time, please allow time for the iOS device to find and connect to other devices in the local network.
While using the application "Out-of-home" mode. The device (air conditioner) cannot be found on the application screen.	• Is the wireless LAN connecting adapter out-of-home status is OFF ?, please set to ON or check the application manual for the out-of-home "Initial Set up" in the DAIKIN Mobile Controller application. • Communication between the router and the internet connection may not be working. Please confirm.
The the wireless LAN connecting adapter lamp does not blink or light.	• Is the circuit breaker turn off ?, please turn on. • Is the wireless LAN connecting adapter ready enable ? Please check and confirm to the wireless LAN connecting adapter connection status. Page 24 • Malfunction in communication between the air conditioner and the wireless LAN connecting adapter. • There may be a problem with your device. Please contact the store where you bought the air conditioner to request a repair service.
None of the above work.	• Refer to the FAQ on: https://www.daikinthal.com/product/dmobile/faq or see FAQ via the tab menu in the DAIKIN Mobile Controller application.
The wireless LAN connecting adapter (DaikinAP****) is not visible on the Wi-Fi available networks in smartphone	• Is the smartphone or your device setting search for the wireless LAN connecting adapter frequency 2.4 GHz? • Is the the wireless LAN connecting adapter lamp is blinking? Page 24

For instructions about how to operate the DAIKIN Mobile Controller application, please refer to the operation manual at <https://www.daikinthal.com/product/dmobile>

Call the service shop immediately.

WARNING

- When an abnormality (such as a burning smell) occurs, stop operation and turn the breaker OFF.
 - Continued operation in an abnormal condition may result in troubles, electric shocks or fire.
 - Consult the service shop where you bought the air conditioner.
- Do not attempt to repair or modify the air conditioner by yourself.
 - Incorrect work may result in electric shocks or fire.
 - Consult the service shop where you bought the air conditioner.

If one of the following symptoms takes place, call the service shop immediately.

- The power cord is abnormally hot or damaged.
- An abnormal sound is heard during operation.
- The safety breaker, a fuse, or the earth leakage breaker cuts off the operation frequently.
- A switch or a button often fails to work properly.
- There is a burning smell.
- Water leaks from the indoor unit.

Turn the breaker OFF and call the service shop.

- After a power failure
The air conditioner automatically resumes operation in about 3 minutes. You should just wait for a while.

- Lightning
If lightning may strike the neighboring area, stop operation and turn the breaker OFF for system protection.

Disposal requirements

- Dismantling of the unit and handling of the refrigerant, oil and other parts should be done in accordance with the relevant local and national regulations. Please contact your local dealer or technicians who have been trained to install, relocate and dismantle.

Troubleshooting



■ Fault diagnosis by remote controller

- In case the air conditioner is malfunctioning, you can check the error code via the remote controller before consulting with service personnel and informing them of the malfunction code.

1. When **CANCEL** is held down for about 5 seconds, “00” blinks in the temperature display section.
2. Press **CANCEL** repeatedly until a long beep is produced.
 - The code indication changes as shown below, and notifies you with a long beep.

	CODE	MEANING
SYSTEM	00	NORMAL
	UA	INDOOR-OUTDOOR UNIT COMBINATION FAULT
	U0	REFRIGERANT SHORTAGE
	U2	DROP VOLTAGE OR MAIN CIRCUIT OVERVOLTAGE
	U4	FAILURE OF TRANSMISSION (BETWEEN INDOOR UNIT AND OUTDOOR UNIT)
INDOOR UNIT	A1	INDOOR PCB DEFECTIVENESS
	A5	HIGH PRESSURE CONTROL OR FREEZE-UP PROTECTOR
	A6	FAN MOTOR FAULT
	C4	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	C9	FAULTY SUCTION AIR TEMPERATURE SENSOR
OUTDOOR UNIT	CC	FAULTY HUMIDITY SENSOR
	EA	COOLING-HEATING SWITCHING ERROR
	E1	CIRCUIT BOARD FAULT
	E5	OL STARTED
	E6	FAULTY COMPRESSOR START UP
	E7	DC FAN MOTOR FAULT
	F3	HIGH TEMPERATURE DISCHARGE PIPE CONTROL
	F6	HIGH TEMPERATURE CONTROL (IN COOLING)
	F8	OPERATION HALT DUE TO COMPRESSOR INTERNAL TEMPERATURE ABNORMALITY
	H0	SENSOR FAULT
	H6	OPERATION HALT DUE TO FAULTY POSITION DETECTION SENSOR
	H8	DC CURRENT SENSOR FAULT
	H9	FAULTY SUCTION AIR TEMPERATURE SENSOR
	J3	FAULTY DISCHARGE PIPE TEMPERATURE SENSOR
	J6	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	J8	FAULTY LIQUID PIPE TEMPERATURE SENSOR
	L3	ELECTRICAL PARTS HEAT FAULT
	L4	HIGH TEMPERATURE AT INVERTER CIRCUIT HEATSINK
	L5	OUTPUT OVERCURRENT
	P4	FAULTY INVERTER CIRCUIT HEATSINK TEMPERATURE SENSOR

NOTE

- A short beep and 2 consecutive beeps indicate non-corresponding codes.
- To cancel the code display, hold **CANCEL** down for about 5 seconds. The code display also clears if no button is pressed for 1 minute.

Specifications

Air conditioner

Indoor unit model name		FTKM09YV2S	FTKM12YV2S	FTKM15YV2S
Outdoor unit model name		RKM09YV2S	RKM12YV2S	RKM15YV2S
Cooling capacity	kW(kcal/h)	2.7(2320)	3.6(3100)	4.4(3780)
Running current	A	3.1	4.6	5.3
Power consumption	W	650	990	1120
Indoor unit	Dimensions	H (mm)	300	
		W (mm)	838	920
		D (mm)	240	
	Net weight	kg	11	13
Outdoor unit	Dimensions	H (mm)	550	595
		W (mm)	675	845
		D (mm)	284	300
	Net weight	kg	24	34
Note: Cooling capacity and electrical performance are based on the following conditions: Indoor temperature: 27°C DB, 19°C WB Outdoor temperature: 35°C DB, 24°C WB Fan speed: High Power supply: 220V, 50Hz				

Air conditioner

Indoor unit model name		FTKM18YV2S	FTKM24YV2S
Outdoor unit model name		RKM18YV2S	RKM24YV2S
Cooling capacity	kW(kcal/h)	5.3(4560)	7.1(6110)
Running current	A	6.8	10.1
Power consumption	W	1430	2130
Indoor unit	Dimensions	H (mm)	300
		W (mm)	1100
		D (mm)	240
	Net weight	kg	15
Outdoor unit	Dimensions	H (mm)	595
		W (mm)	845
		D (mm)	300
	Net weight	kg	34
Note: Cooling capacity and electrical performance are based on the following conditions: Indoor temperature: 27°C DB, 19°C WB Outdoor temperature: 35°C DB, 24°C WB Fan speed: High Power supply: 220V, 50Hz			

SIAM DAIKIN SALES CO.,LTD.

22 Soi Onnuch 55/1 On-nuch Rd., Pravet
Subdistrict, Pravet District, Bangkok 10250
Thailand.

Tel : 0-2838-3200

Fax : 0-2721-7607-8

บริษัท สยามไดकिनเซลส์ จำกัด

22 ซอยอ่อนนุช 55/1
ถนนอ่อนนุช แขวงประเวศ
เขตประเวศ, กรุงเทพฯ 10250

โทร : 0-2838-3200

โทรสาร : 0-2721-7607-8



This telecommunication equipment
conforms to the technical standards or
requirements of NBTC.



กบต.

เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้
รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม
หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช.
เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุ
คมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต
วิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม
พ.ศ. 2498



nanb. | โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 (InswS)